


FIG. 1

FIG. 2

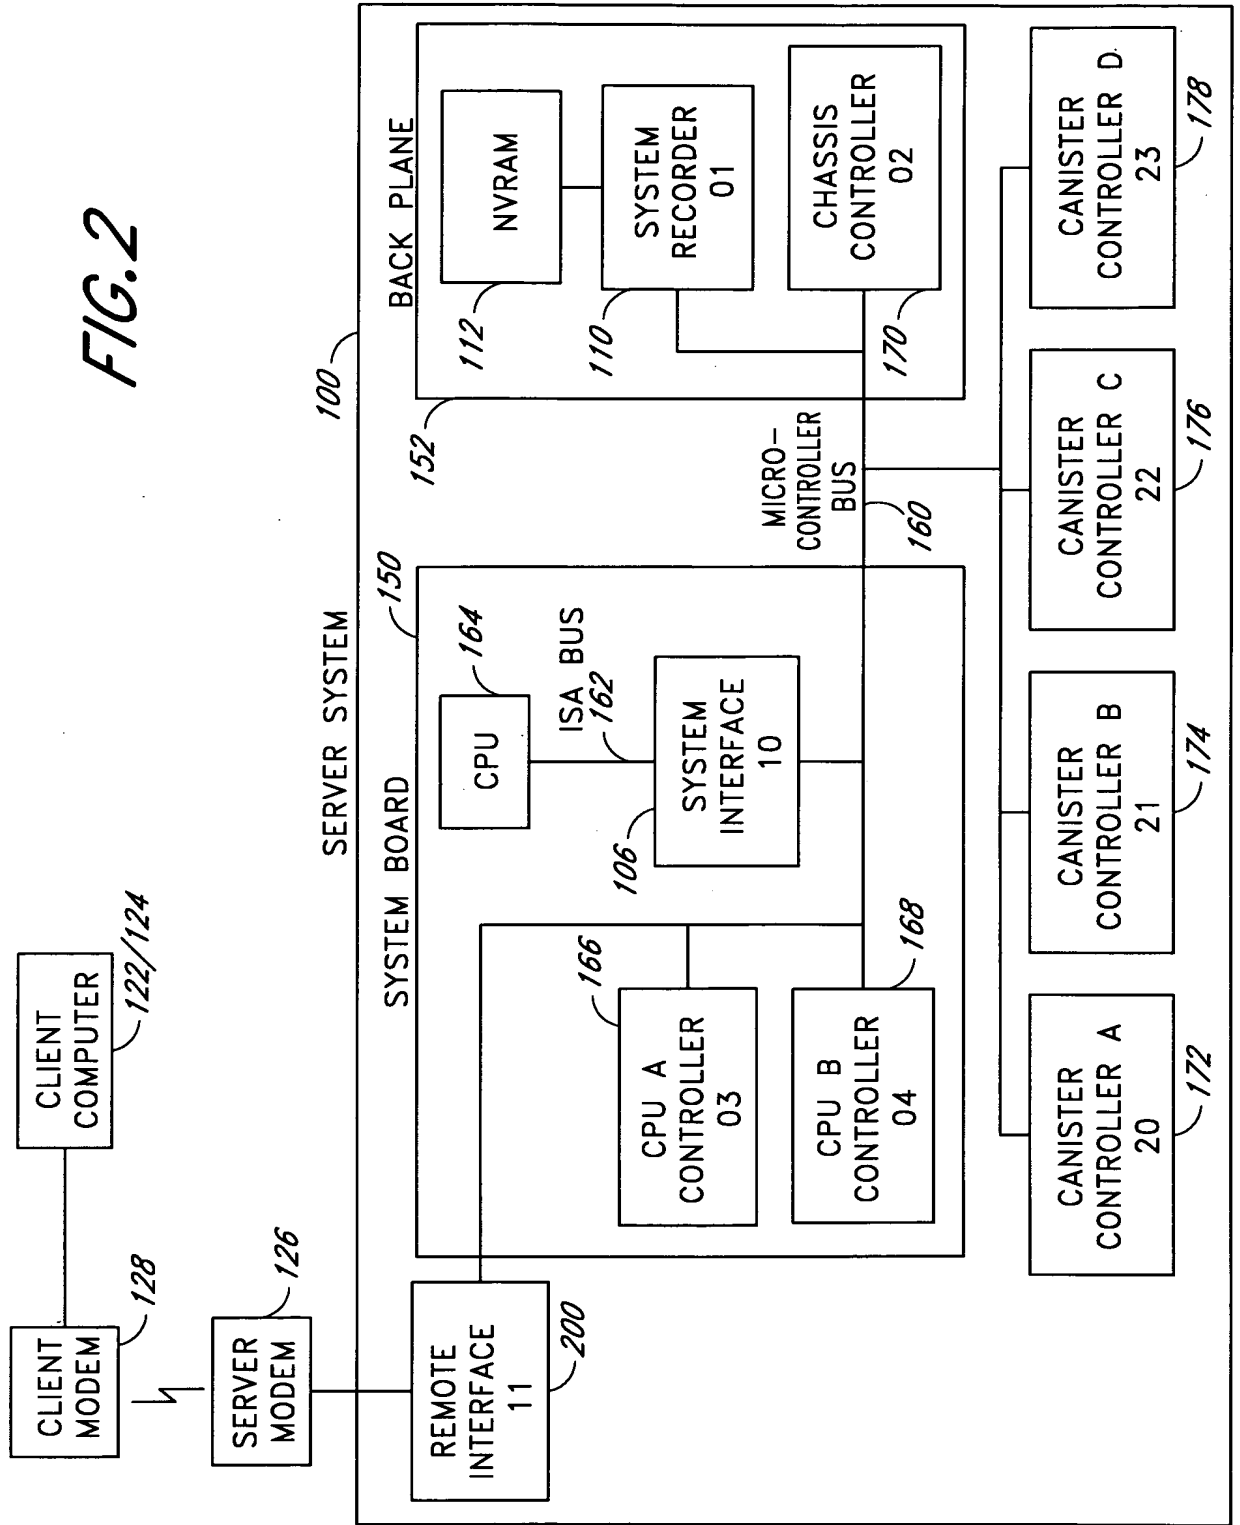

REMOTE INTERFACE SERIAL PROTOCOL MESSAGE FORMATS

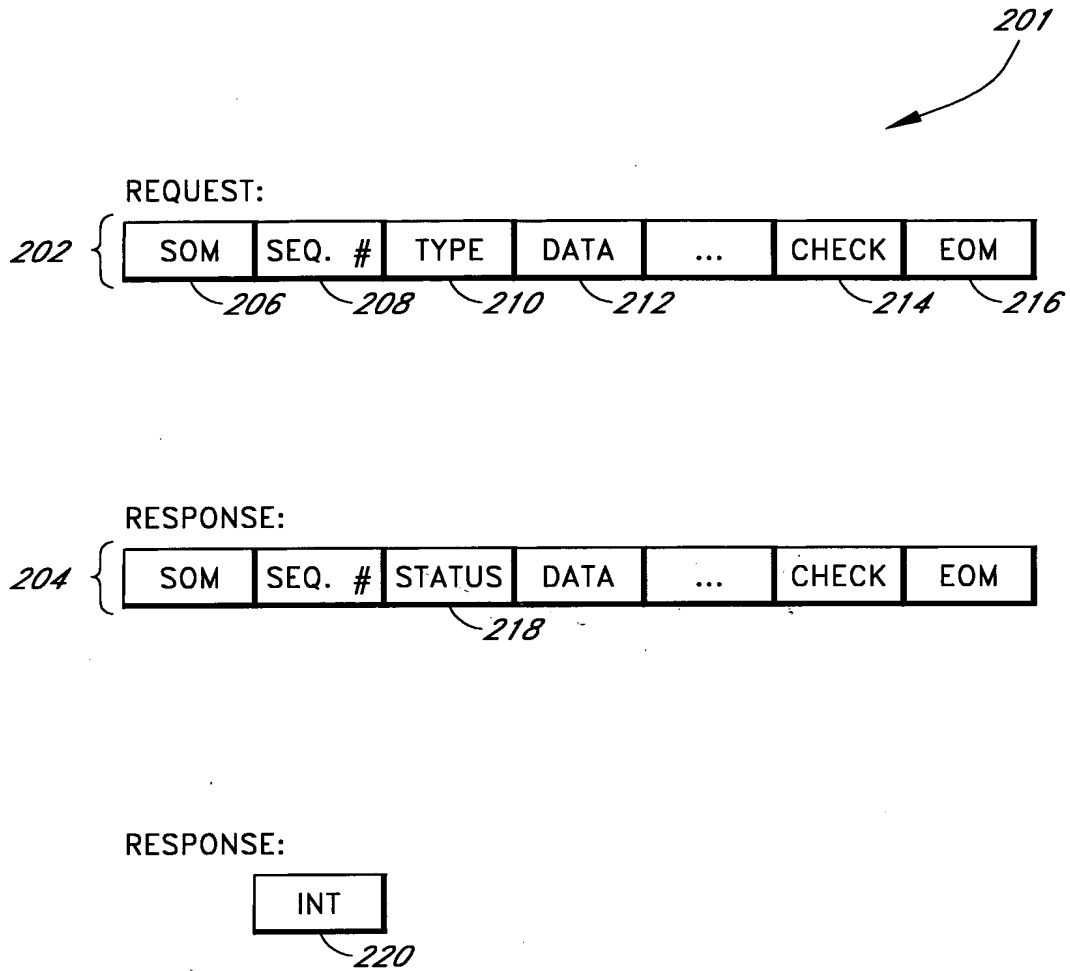


FIG. 3

POWER-ON PROCESS

FIG. 4A

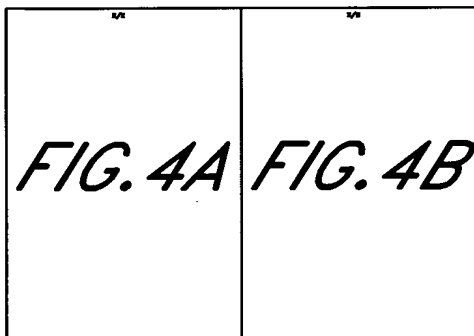
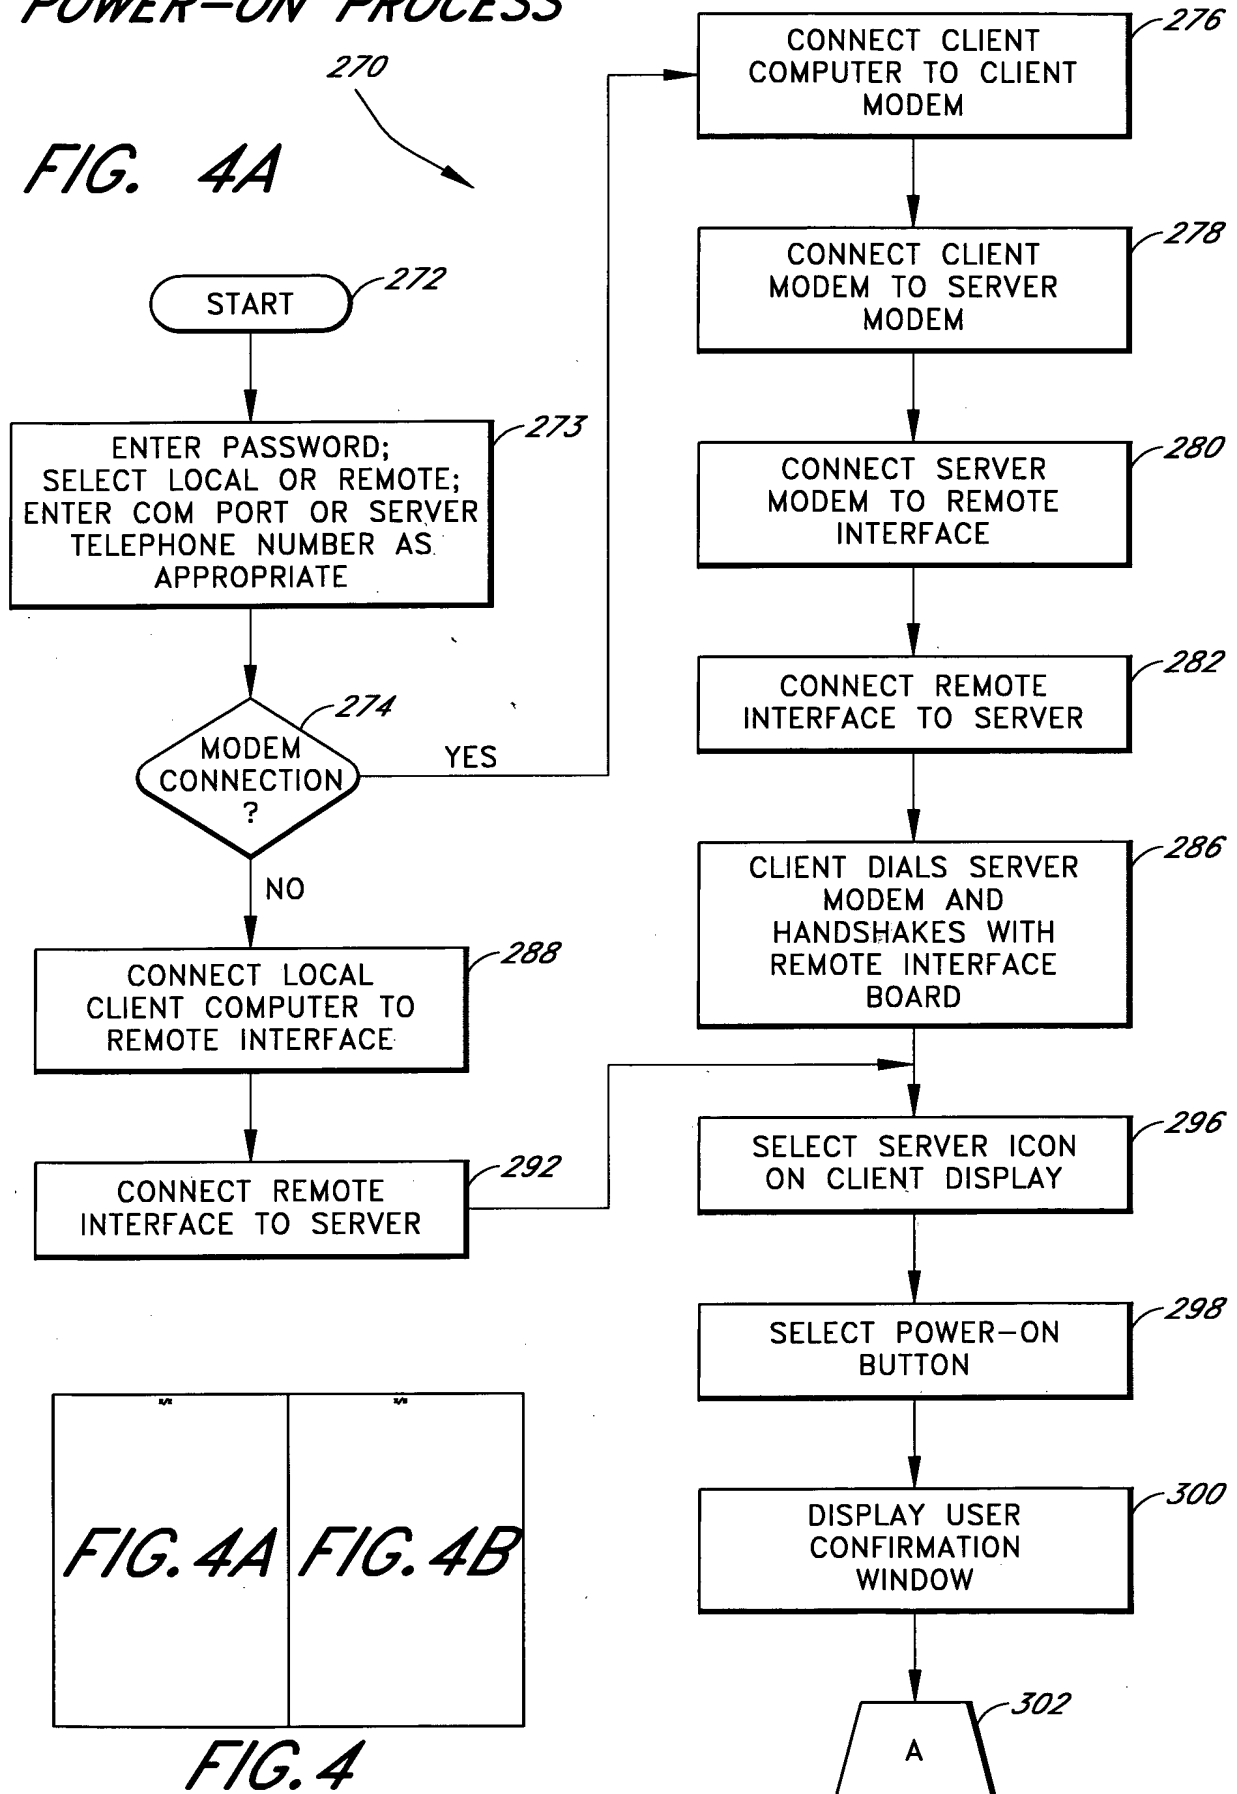


FIG. 4

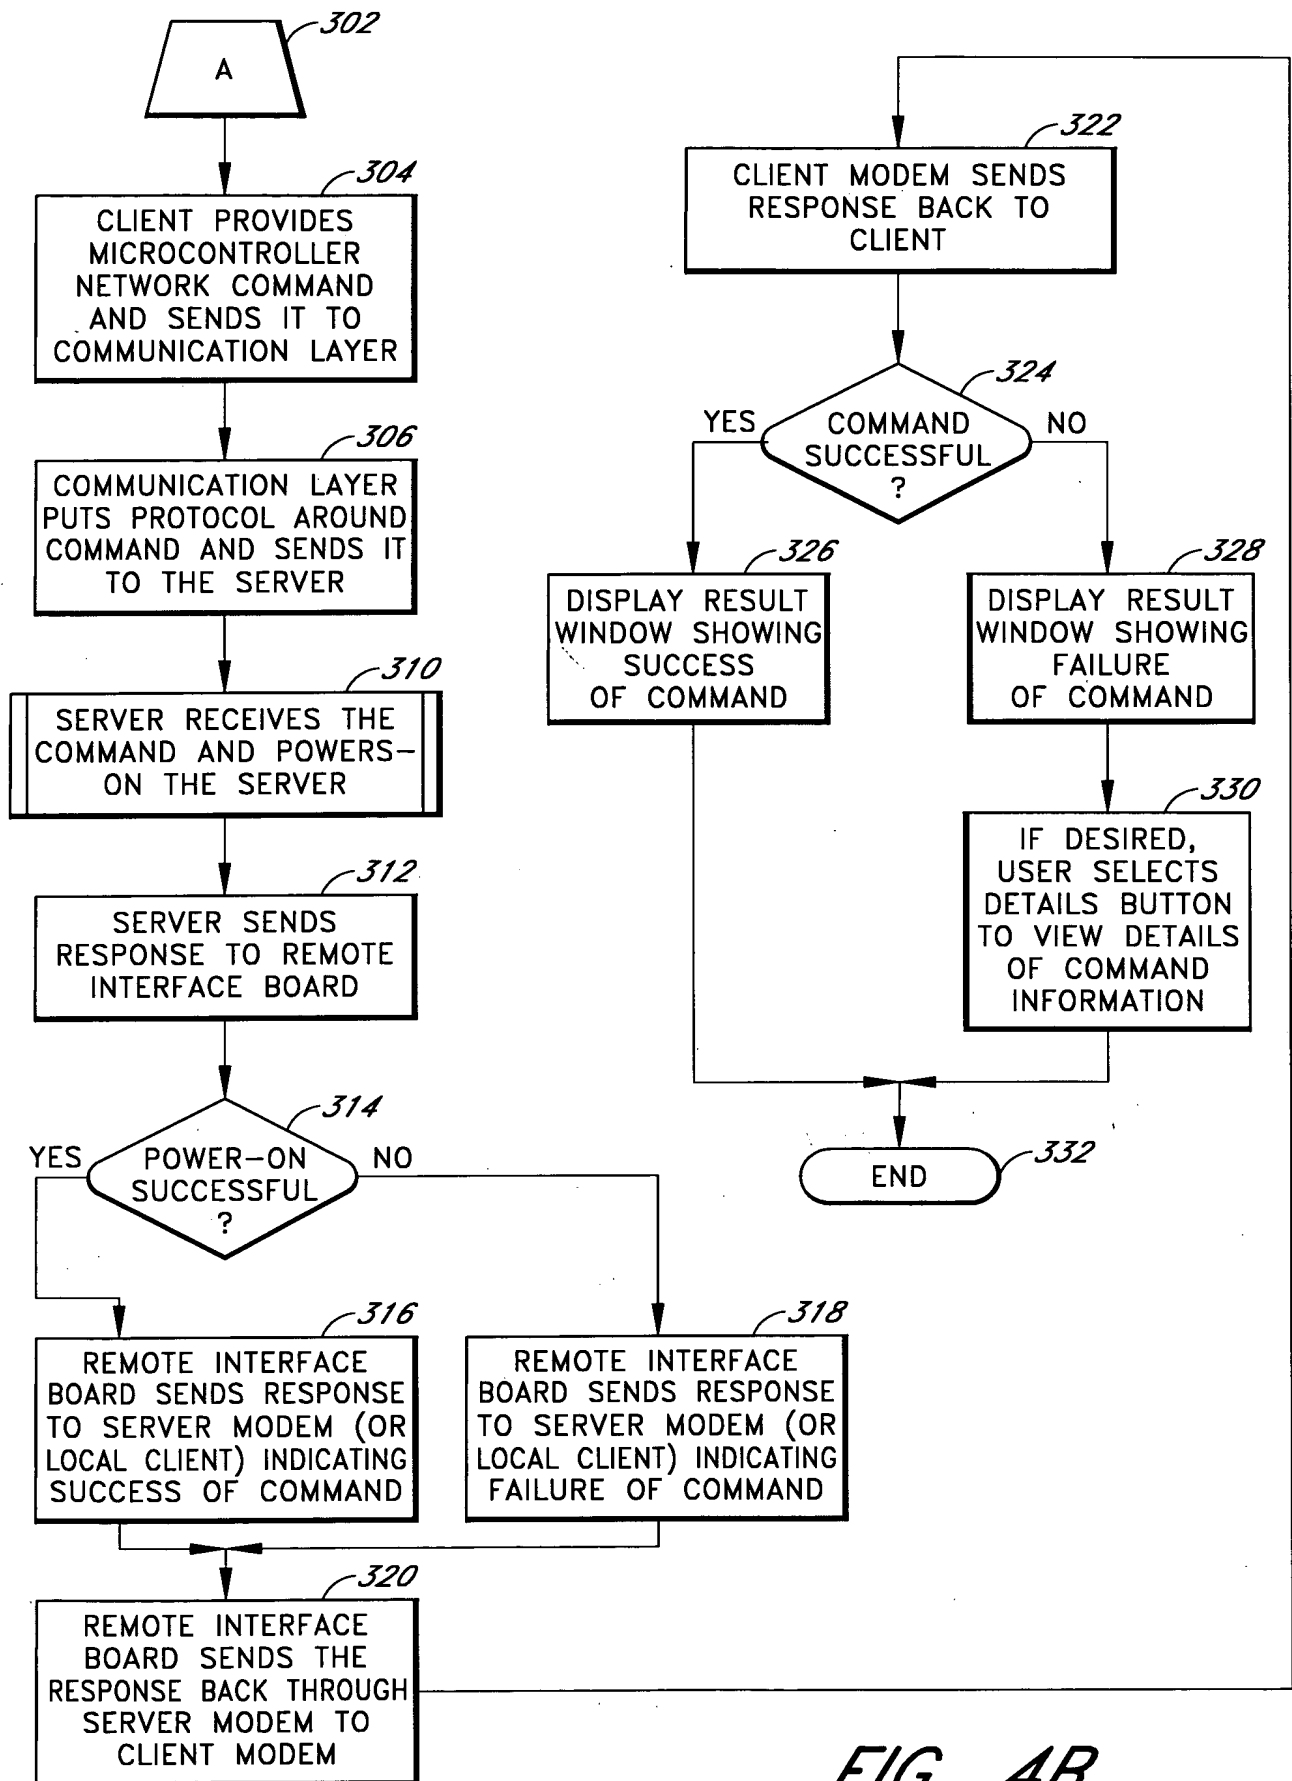


FIG. 4B

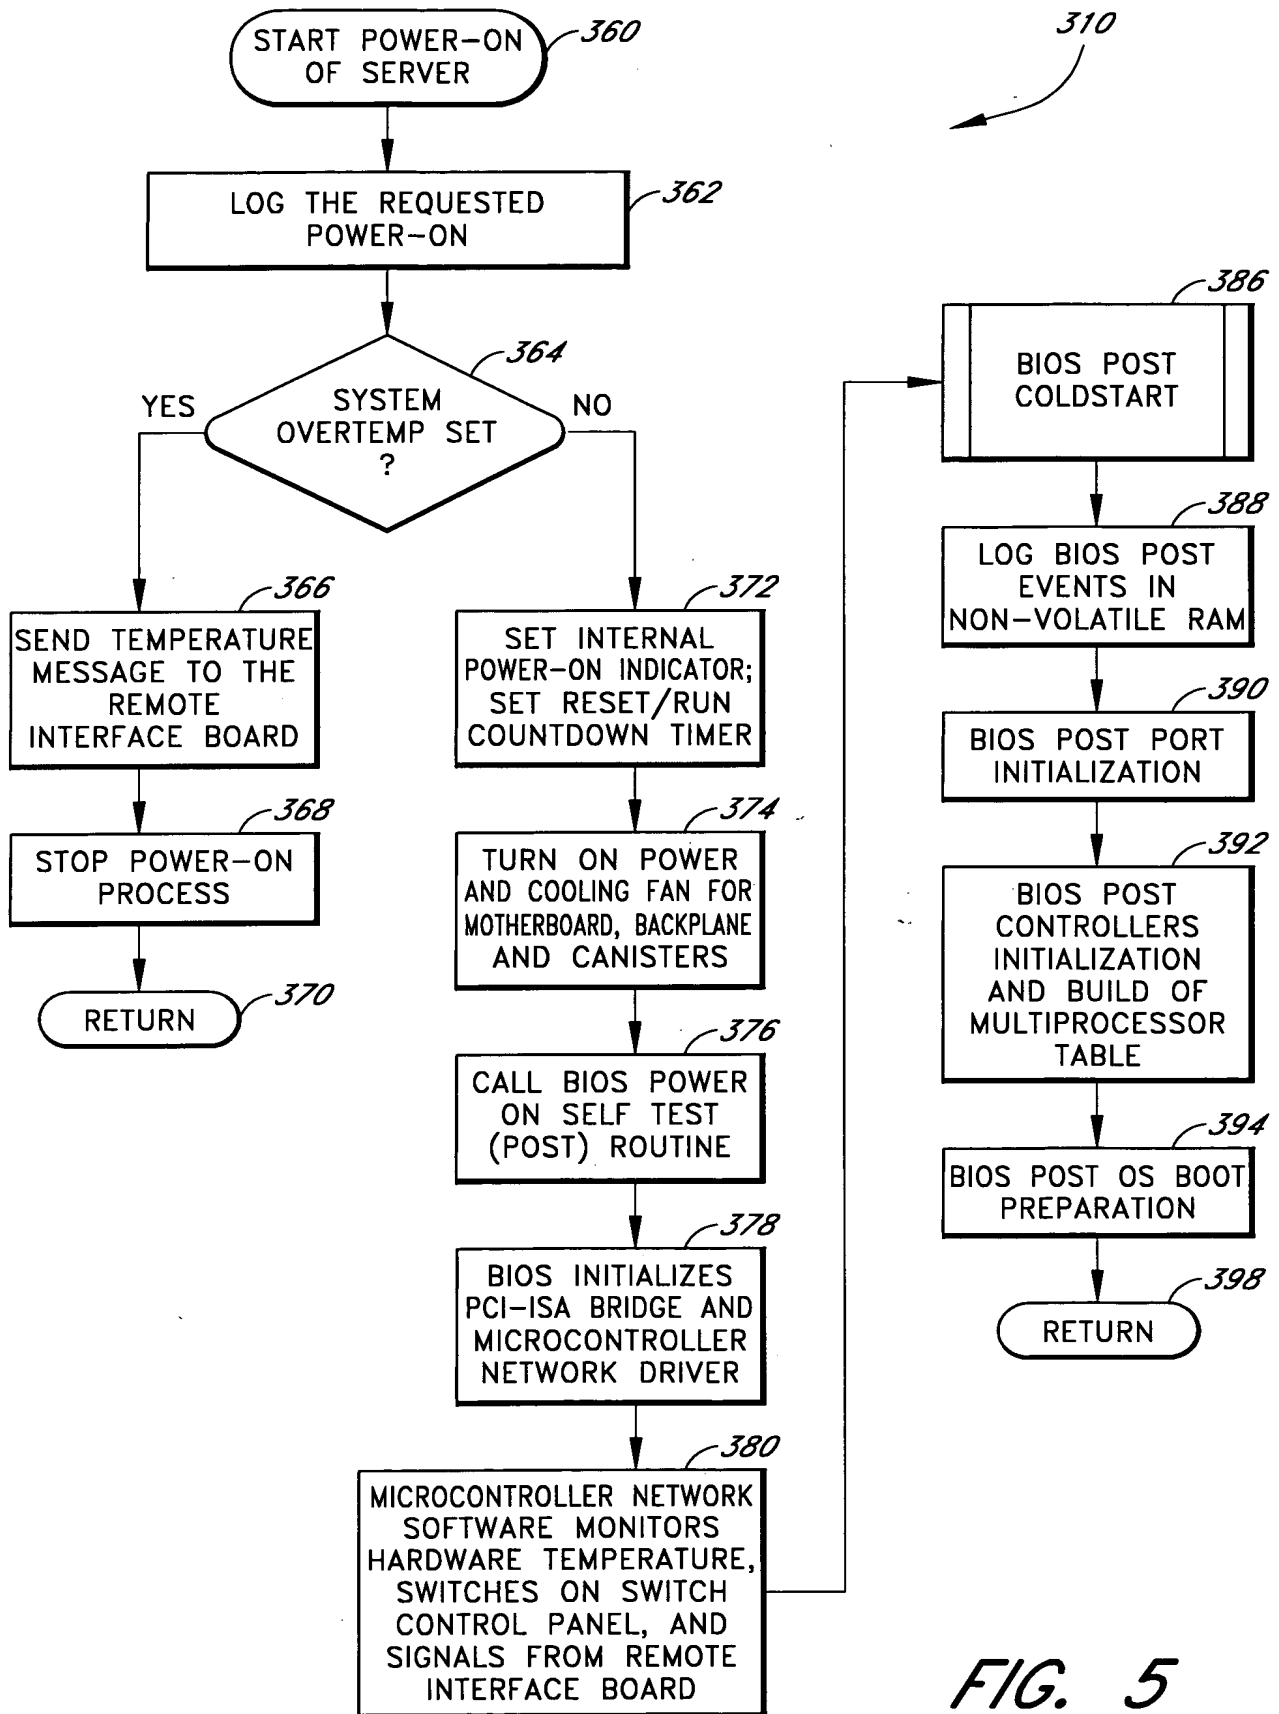
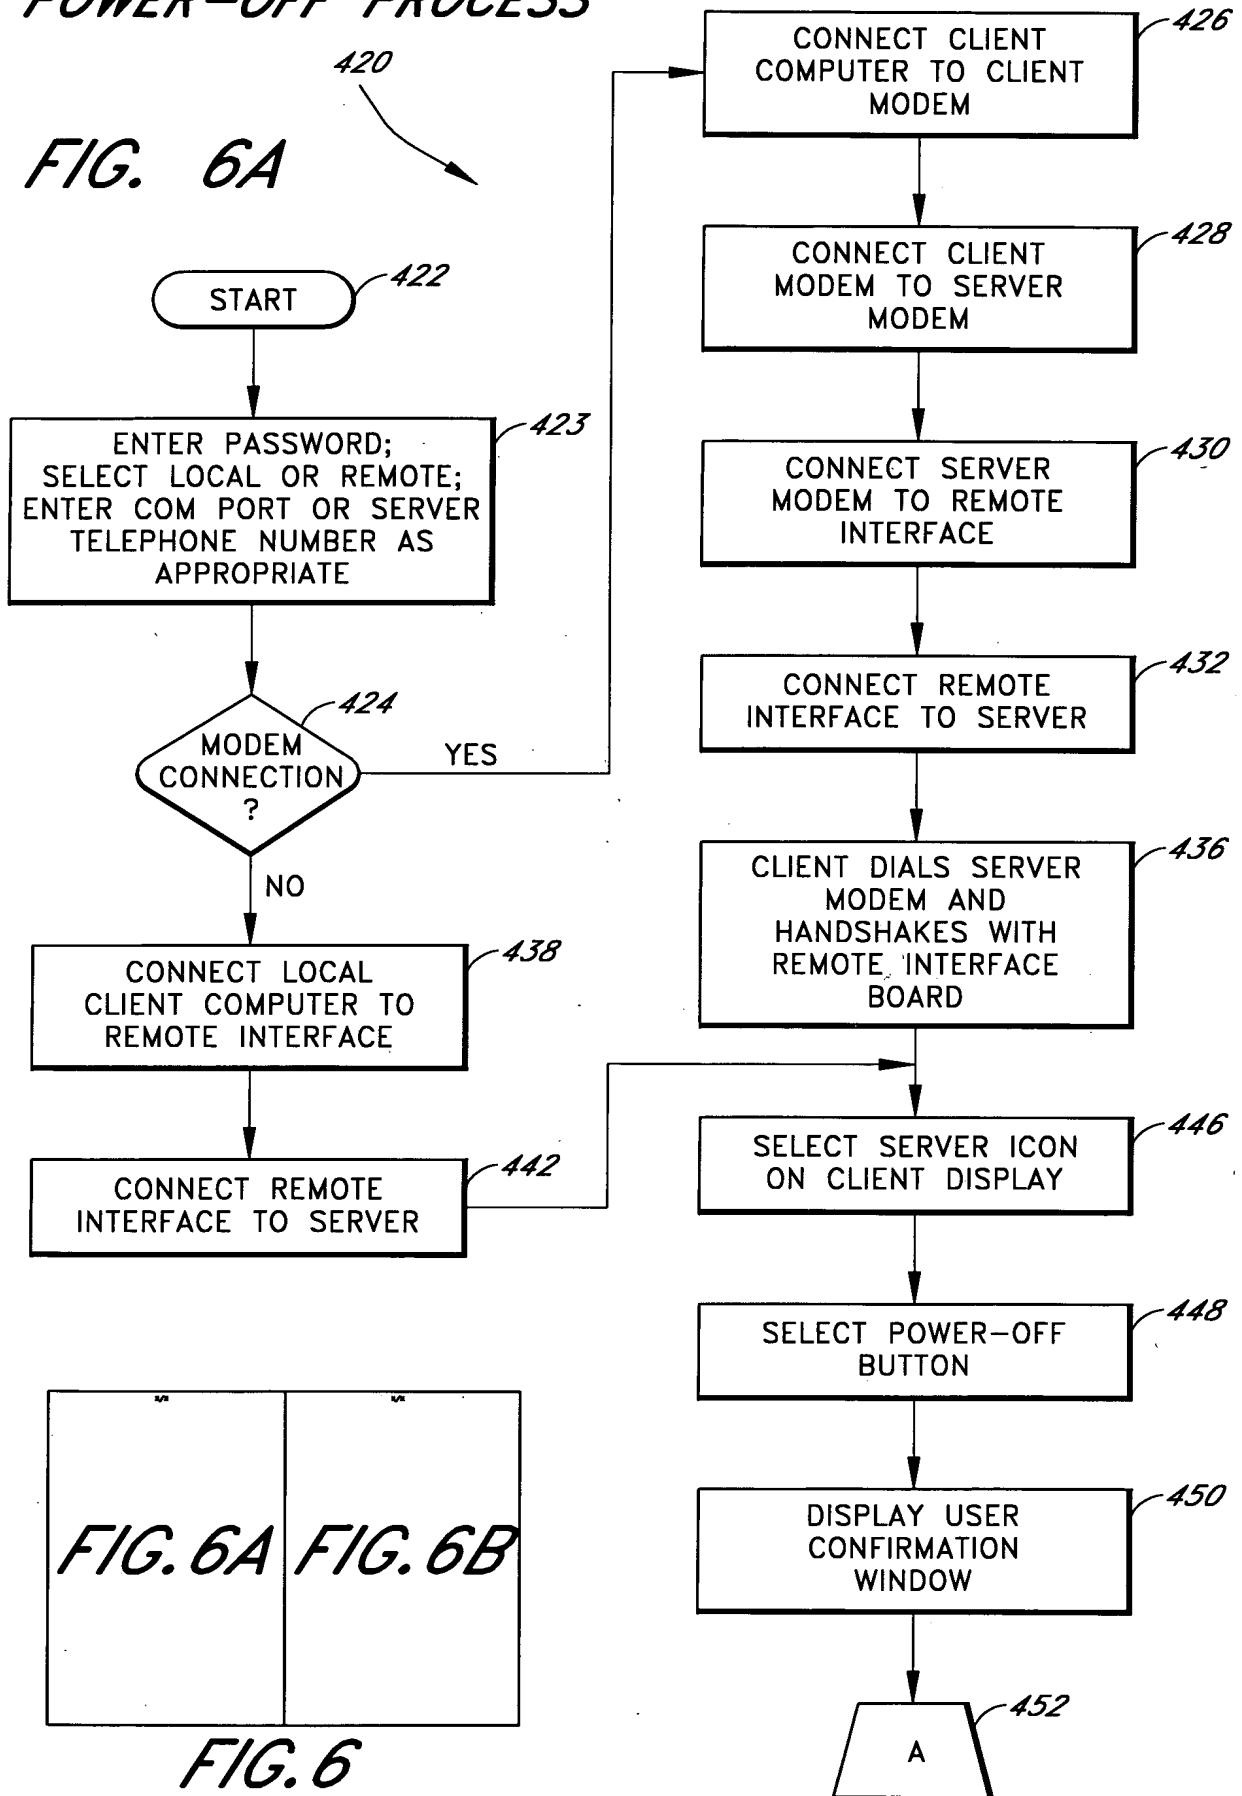


FIG. 5

POWER-OFF PROCESS

FIG. 6A



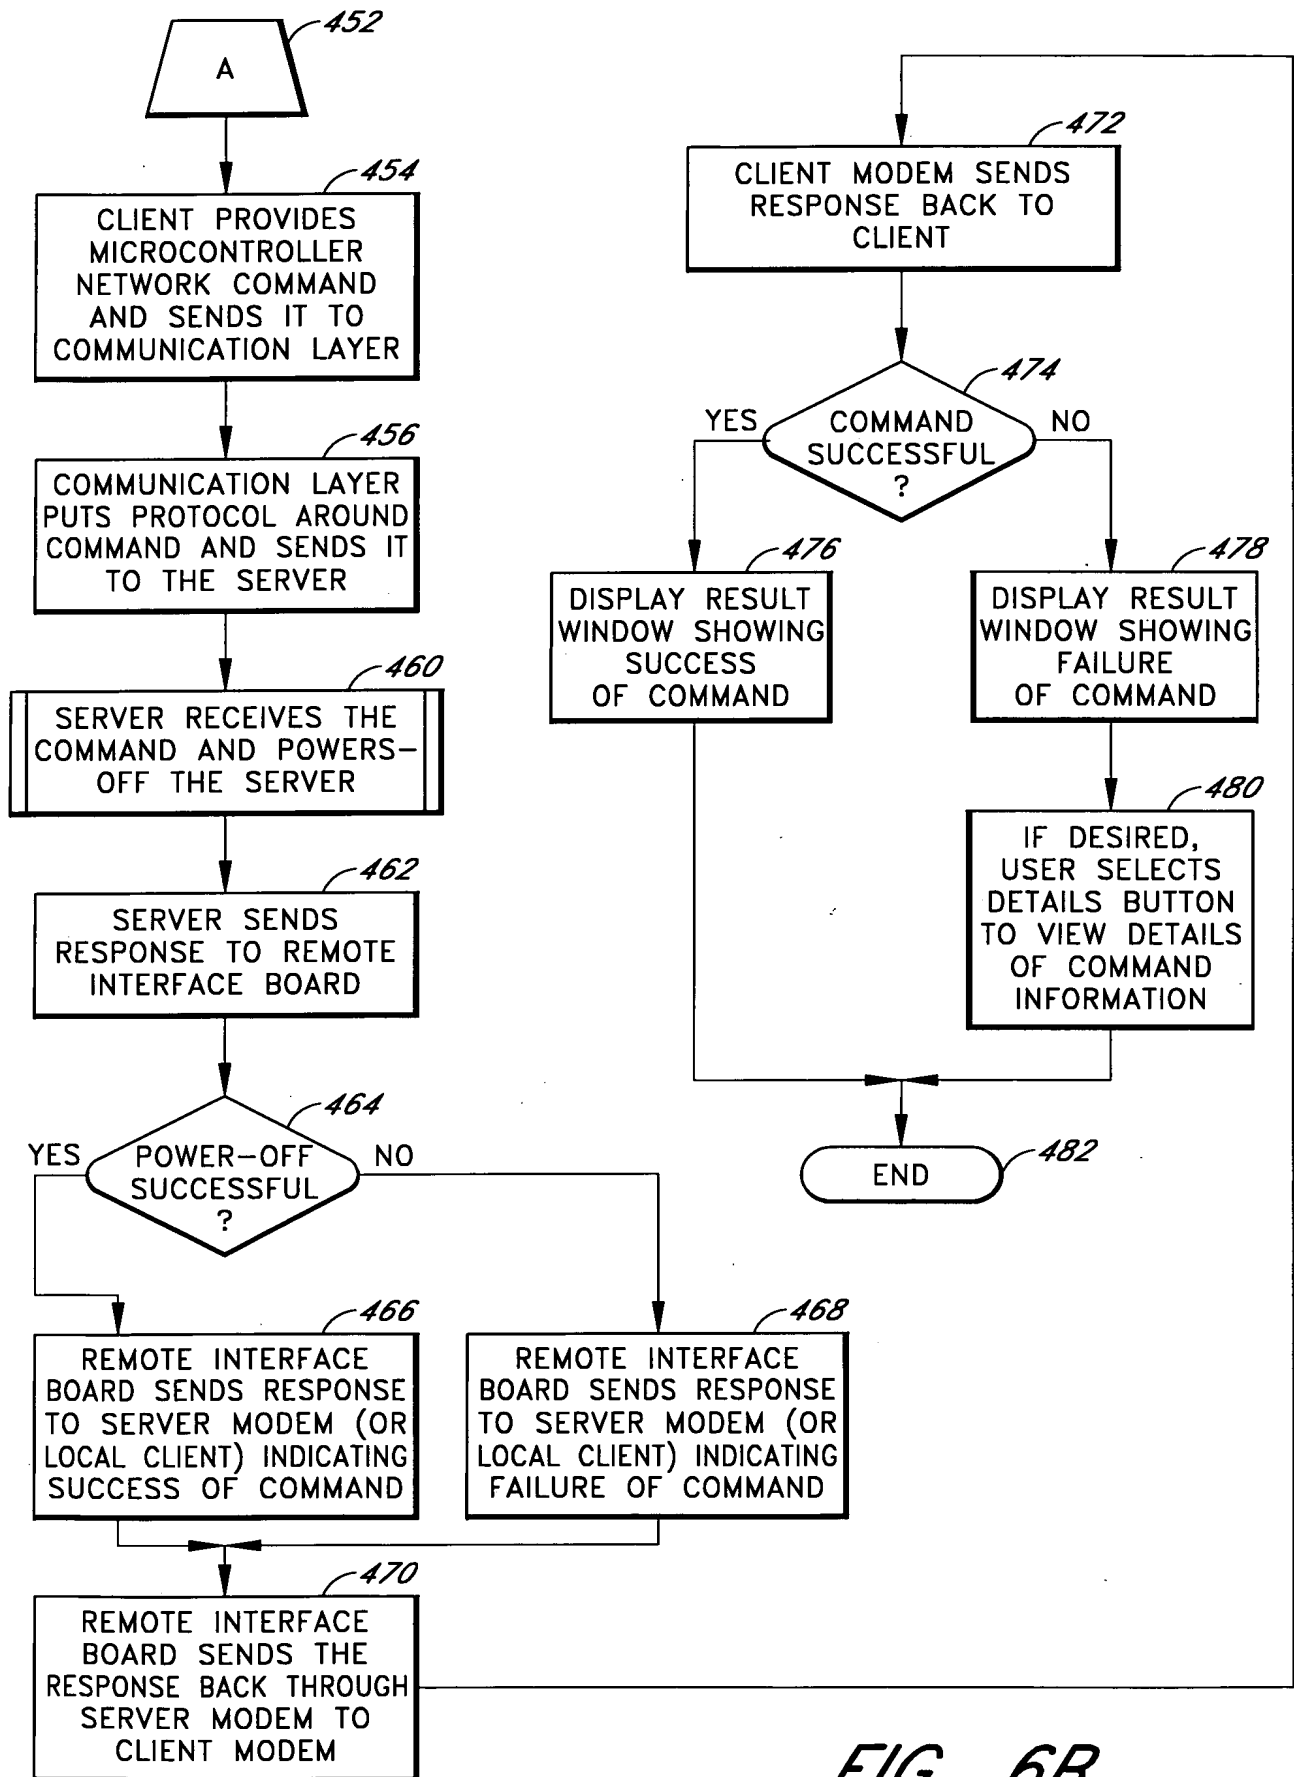


FIG. 6B

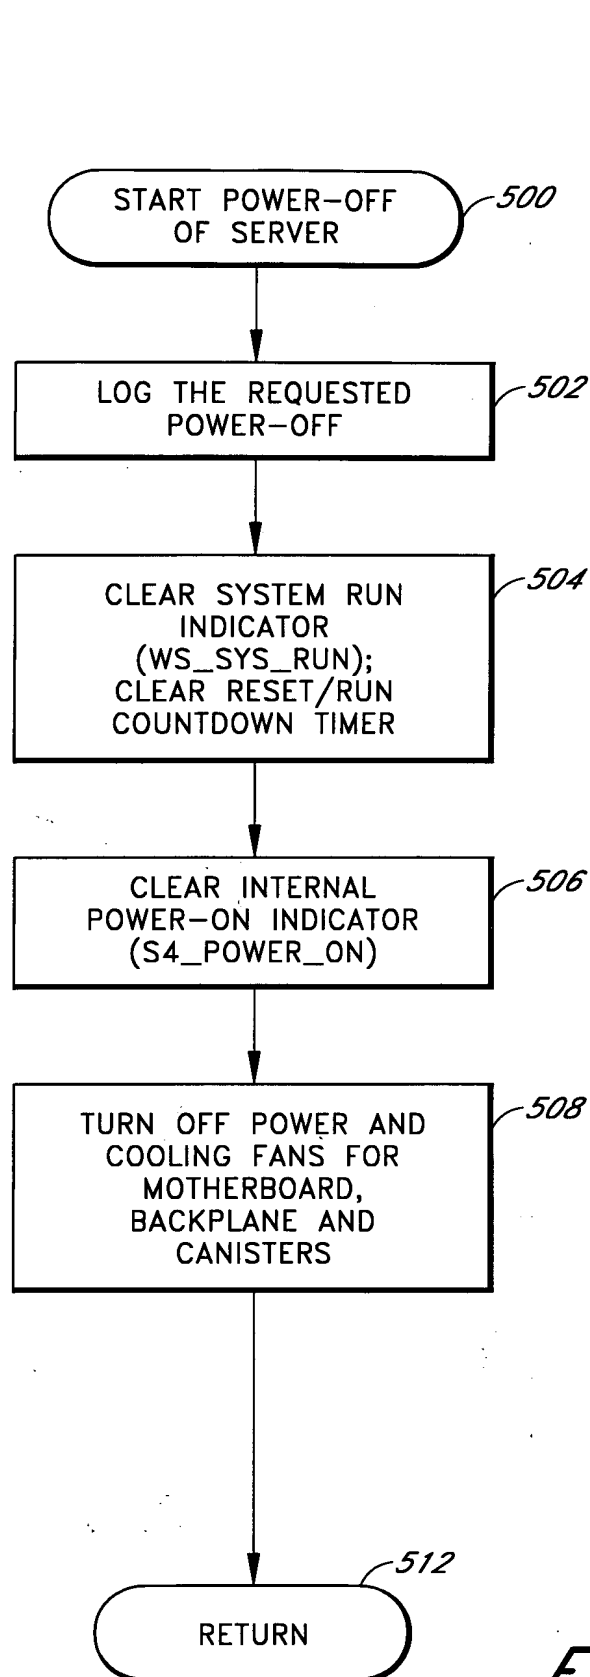
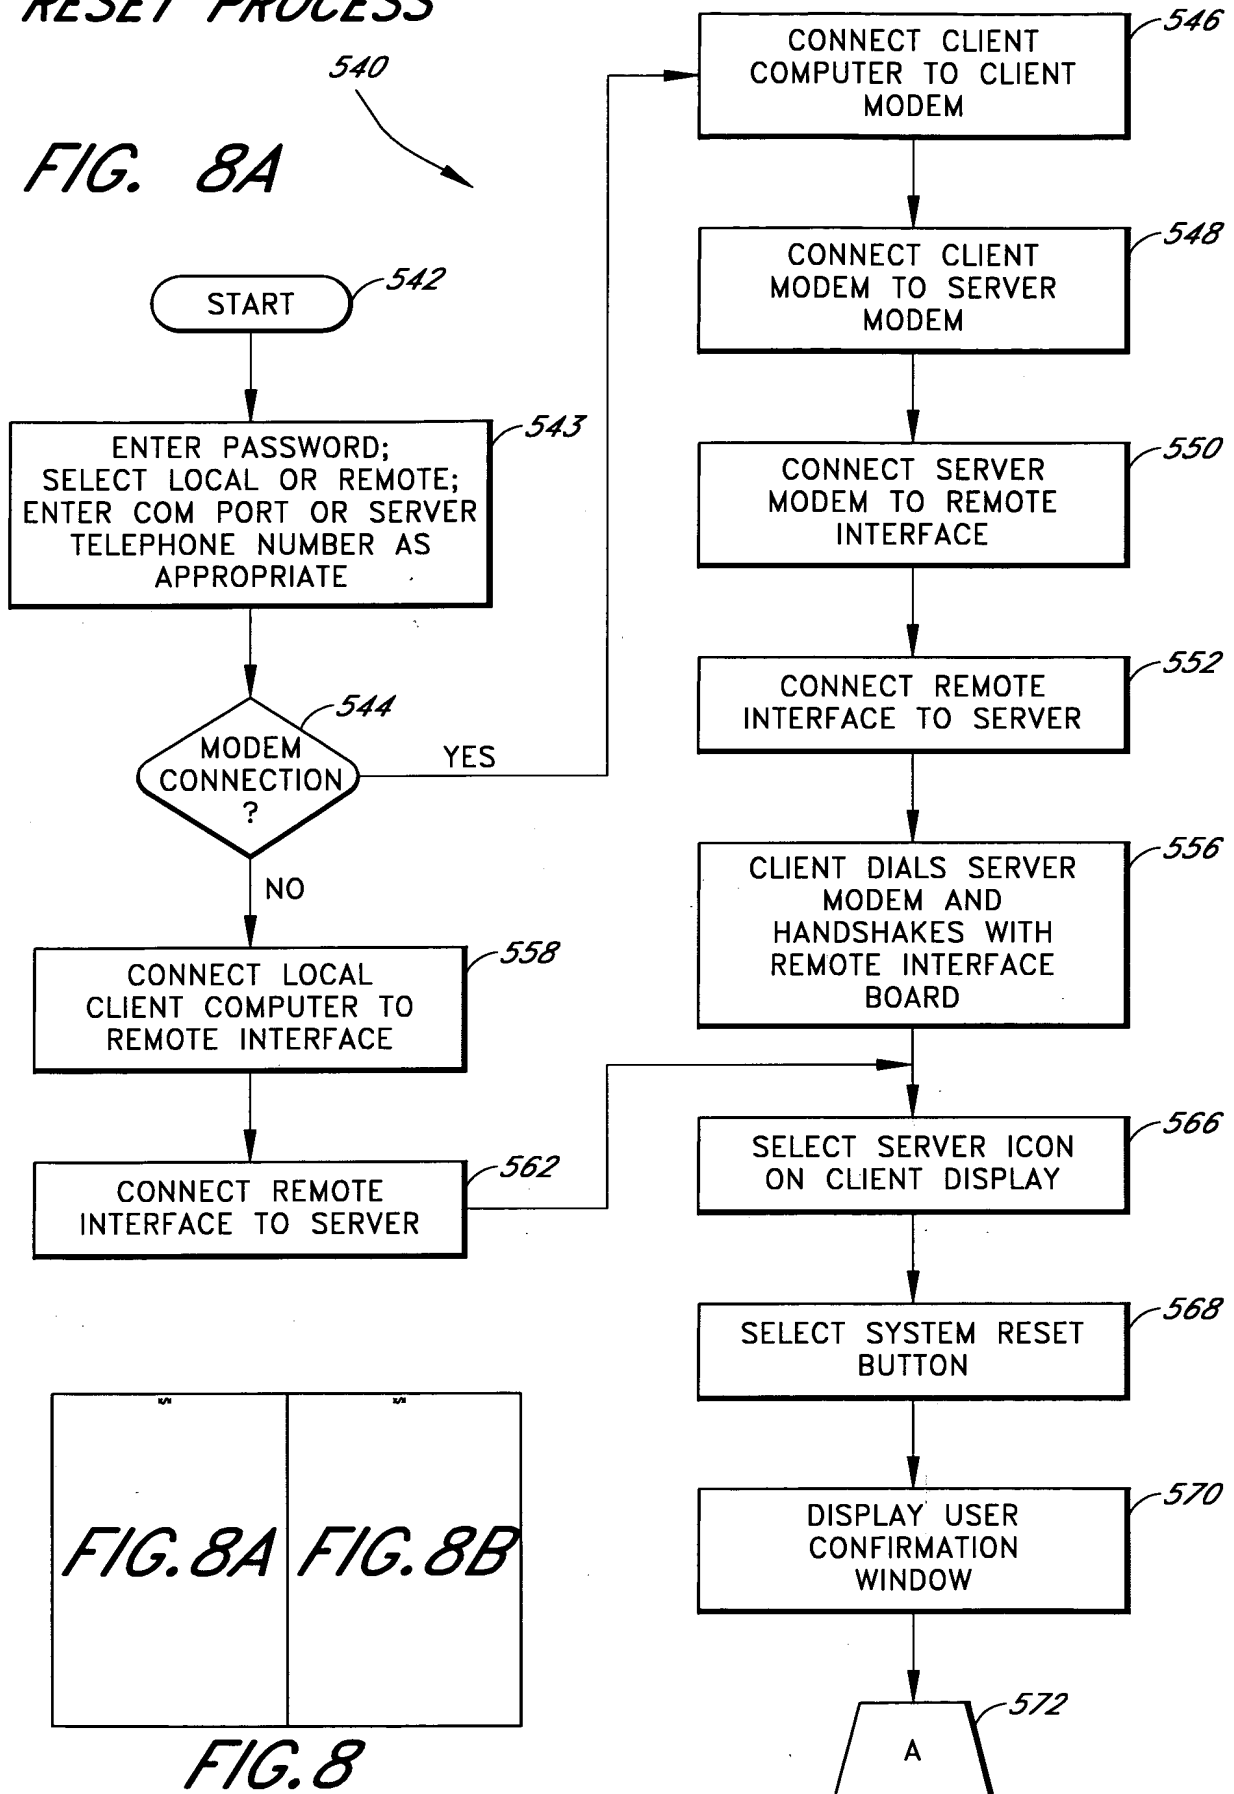


FIG. 7

RESET PROCESS

FIG. 8A



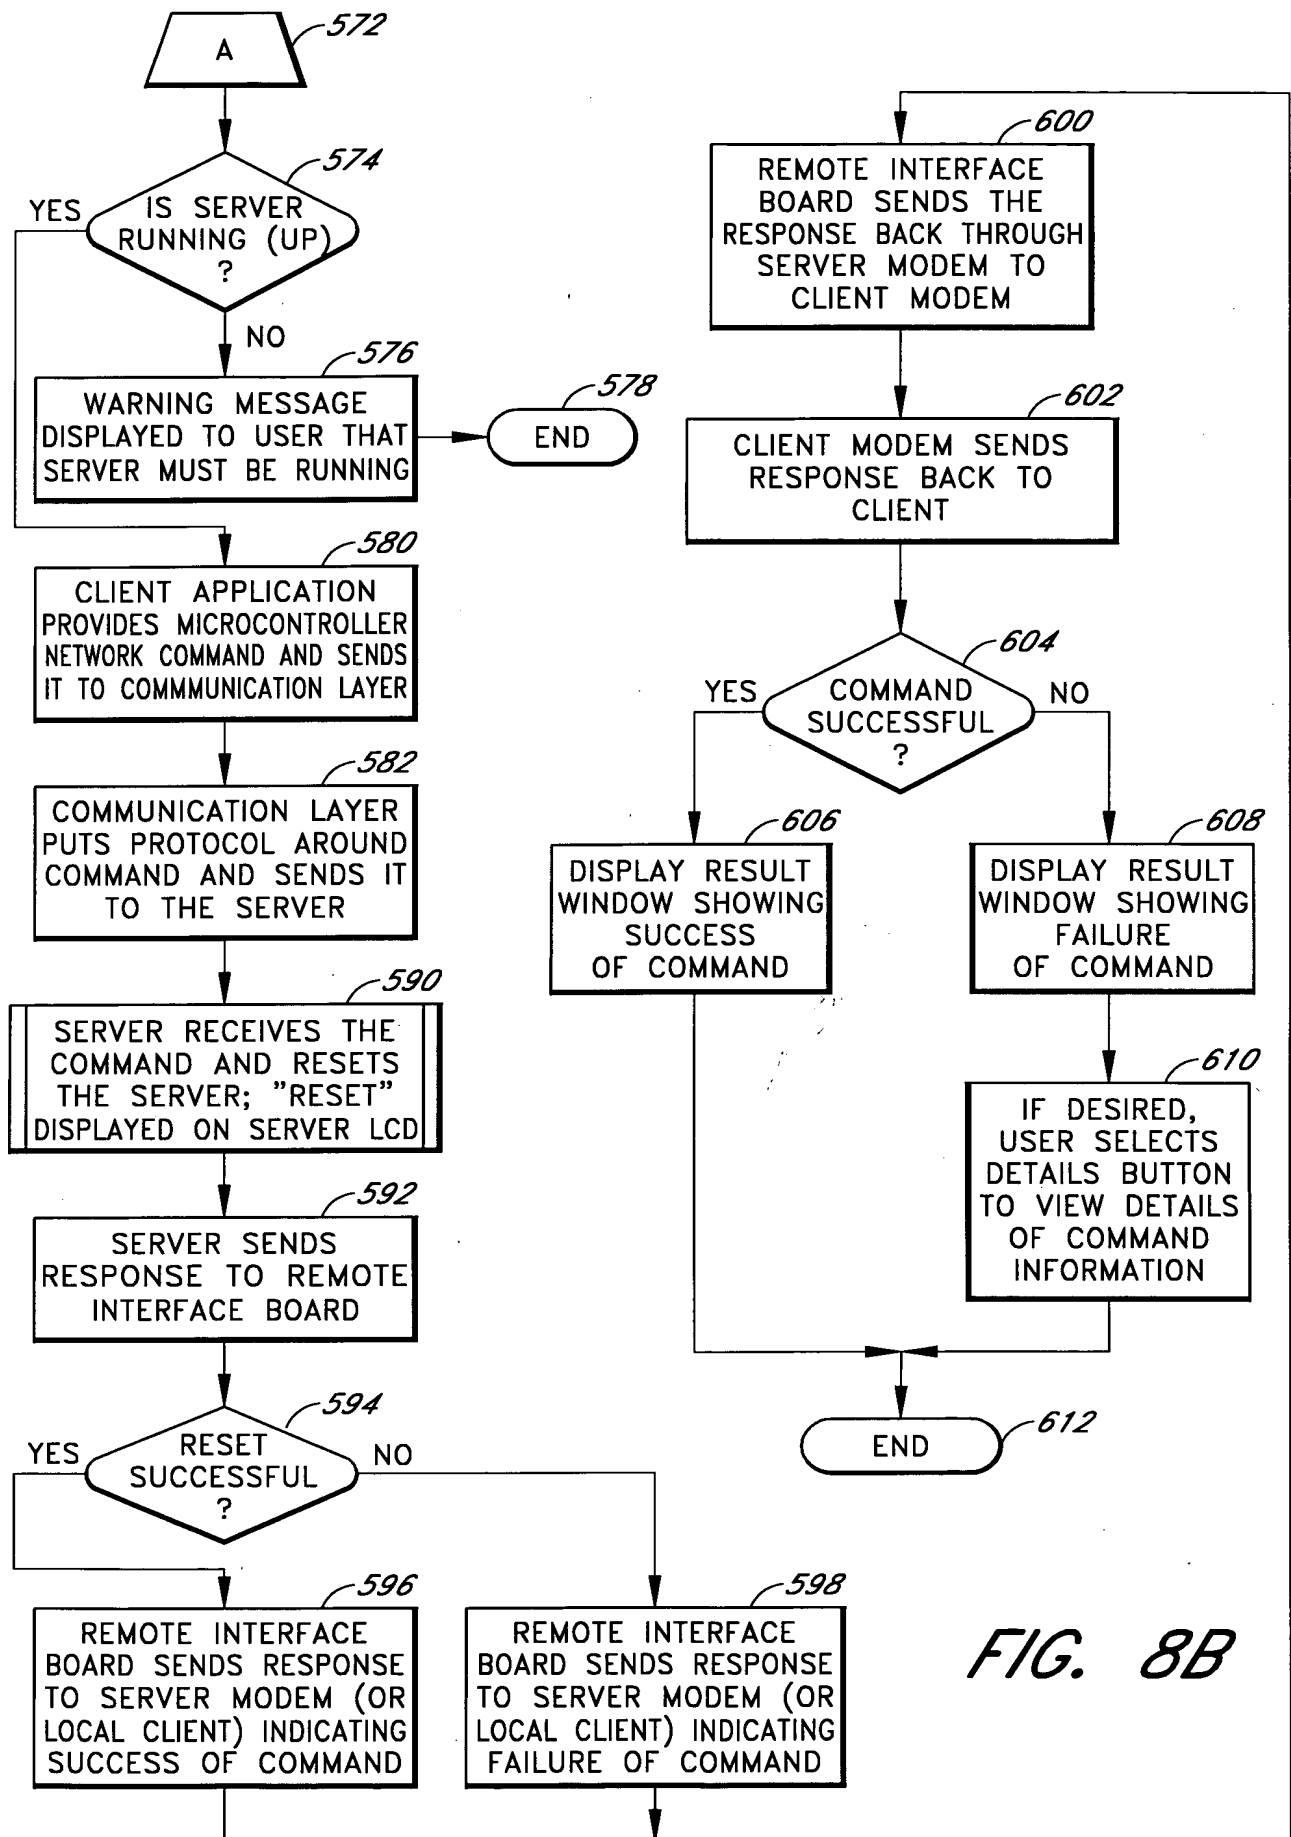


FIG. 8B

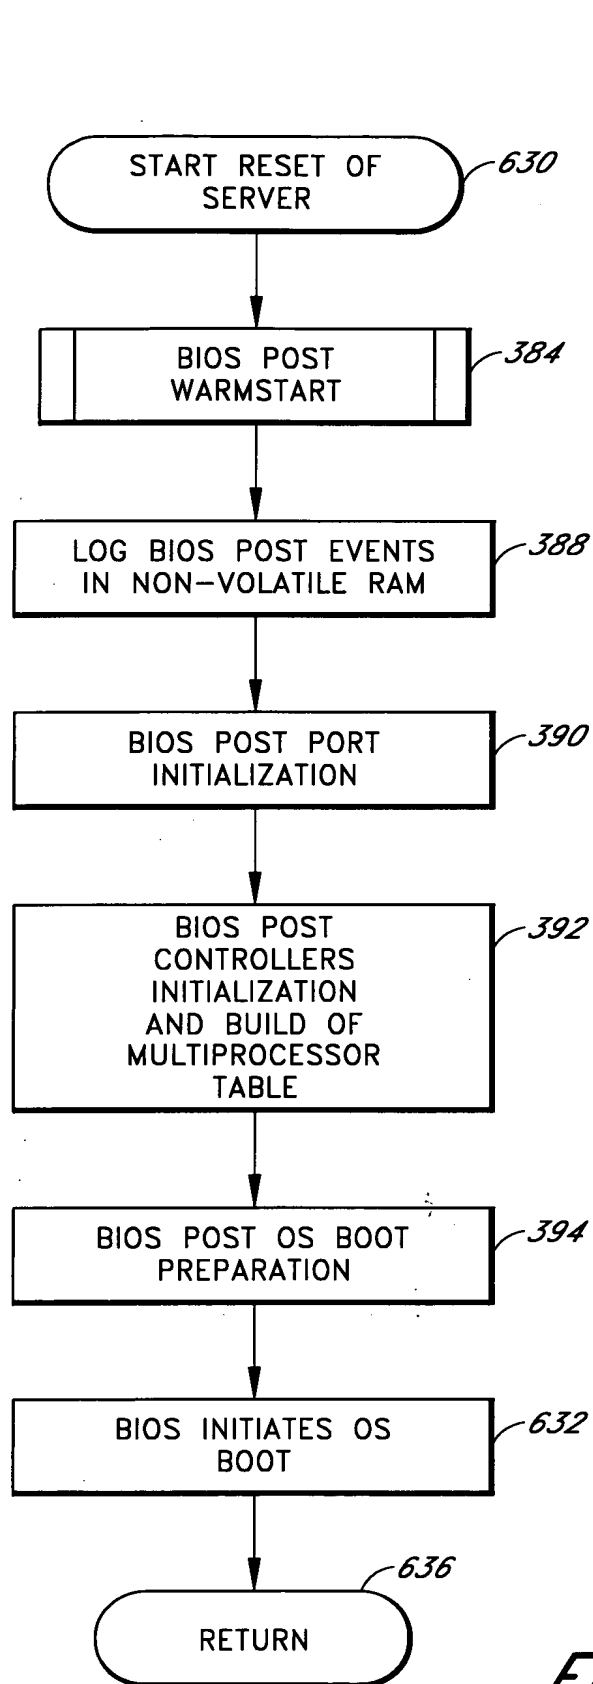
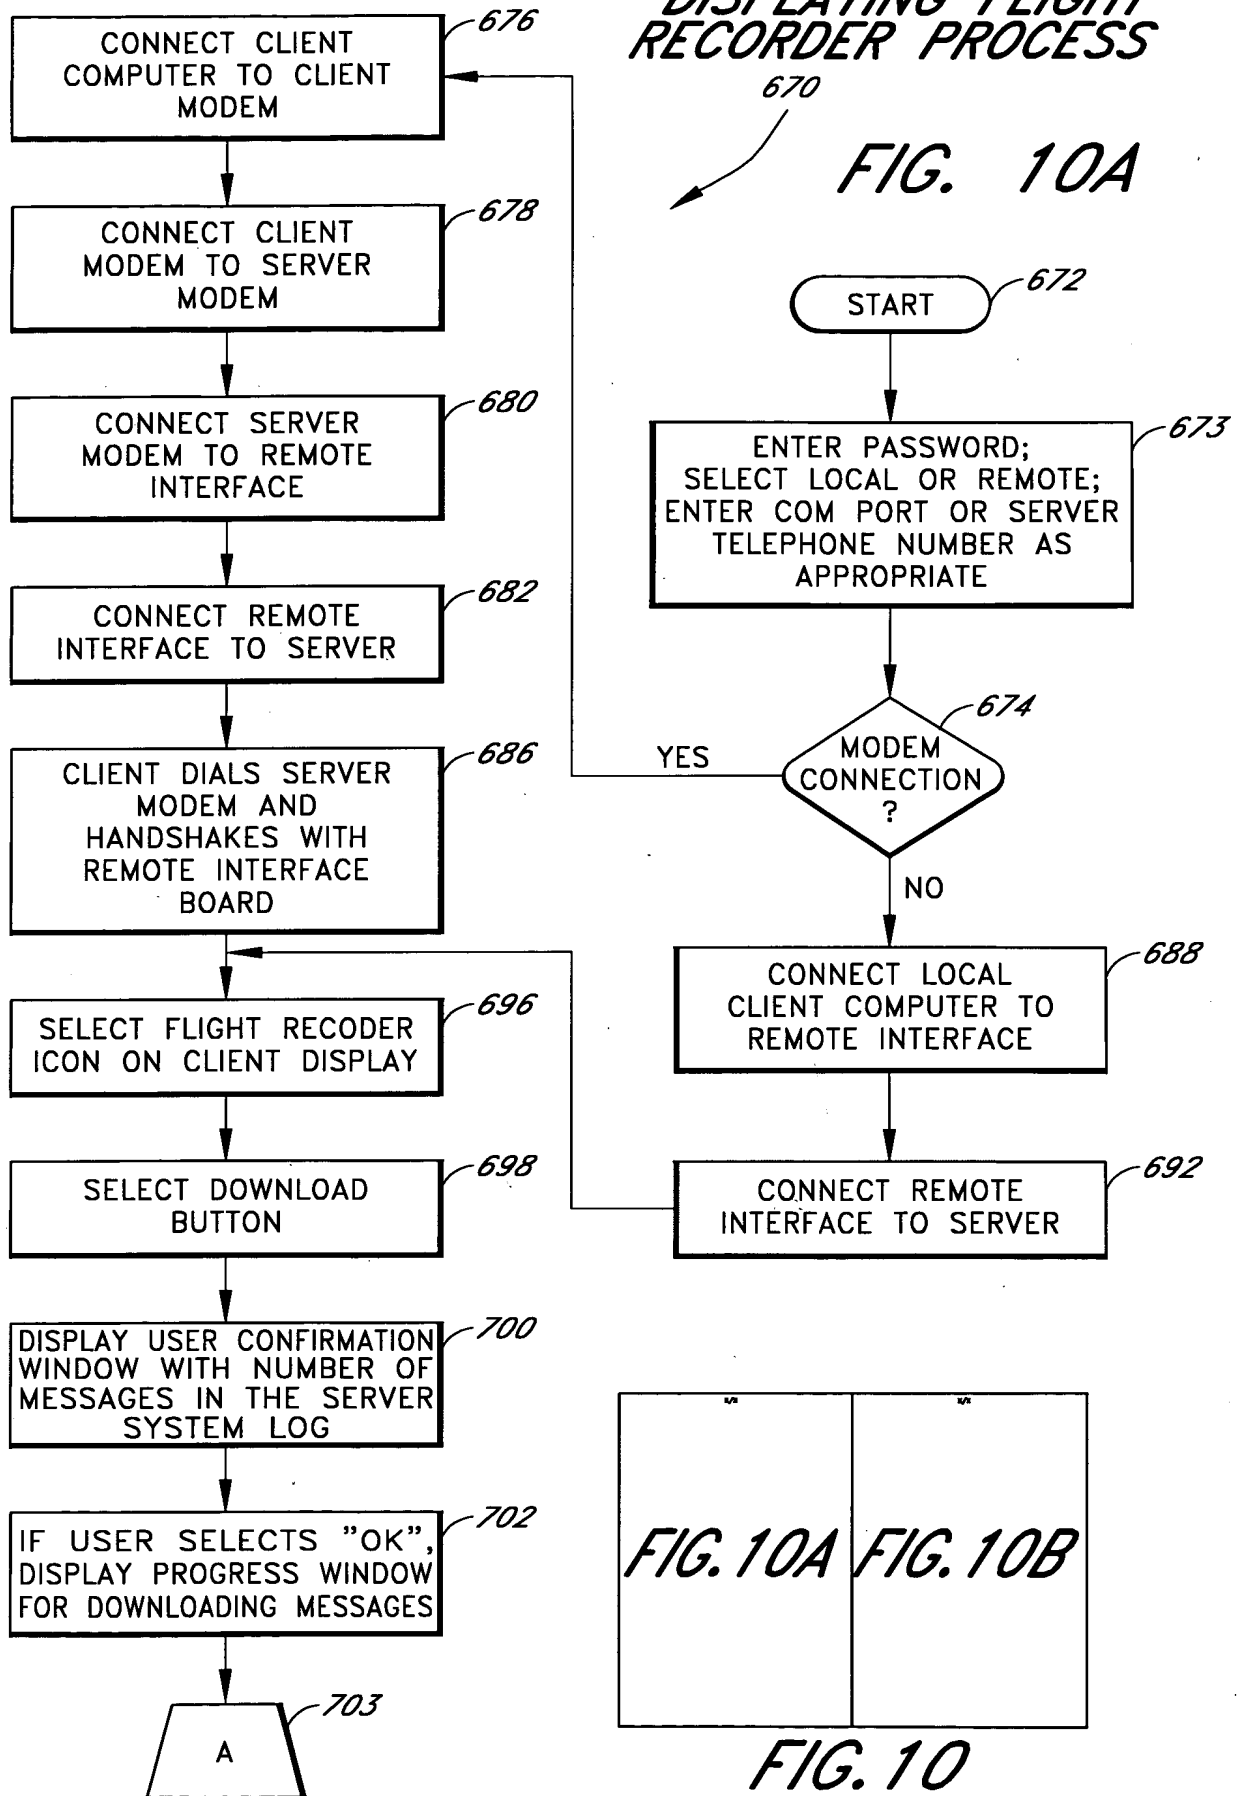


FIG. 9

DISPLAYING FLIGHT RECORDER PROCESS

FIG. 10A



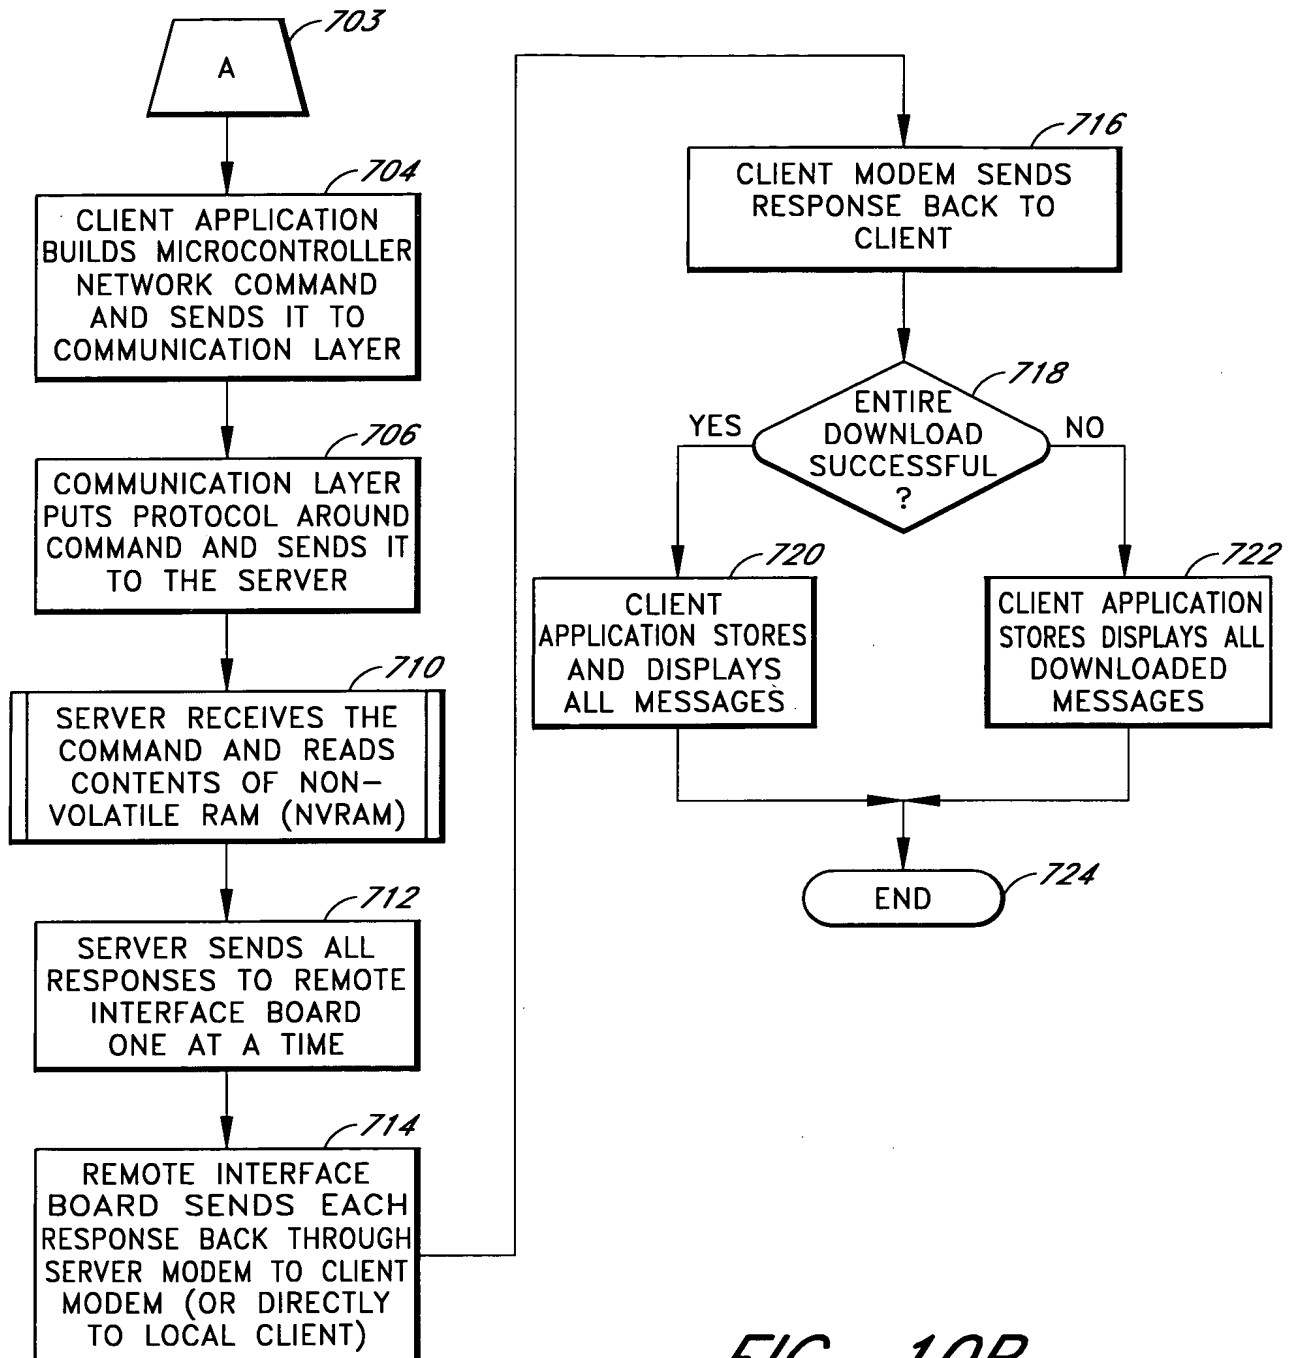


FIG. 10B

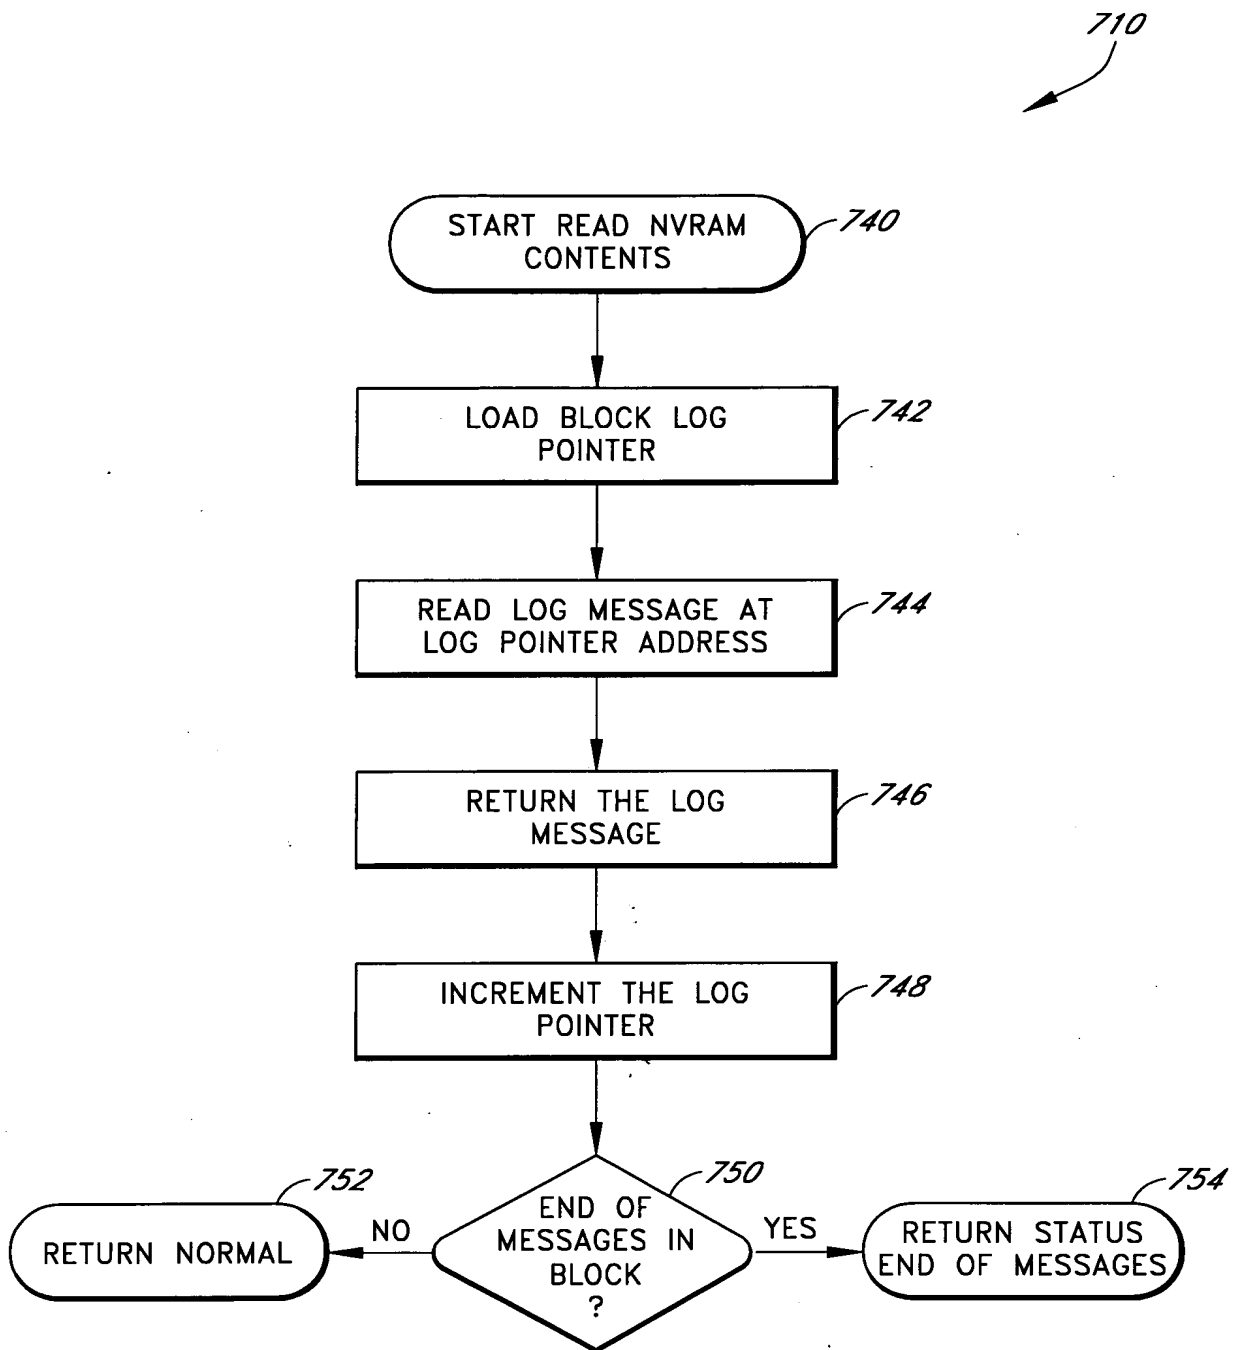


FIG. 11

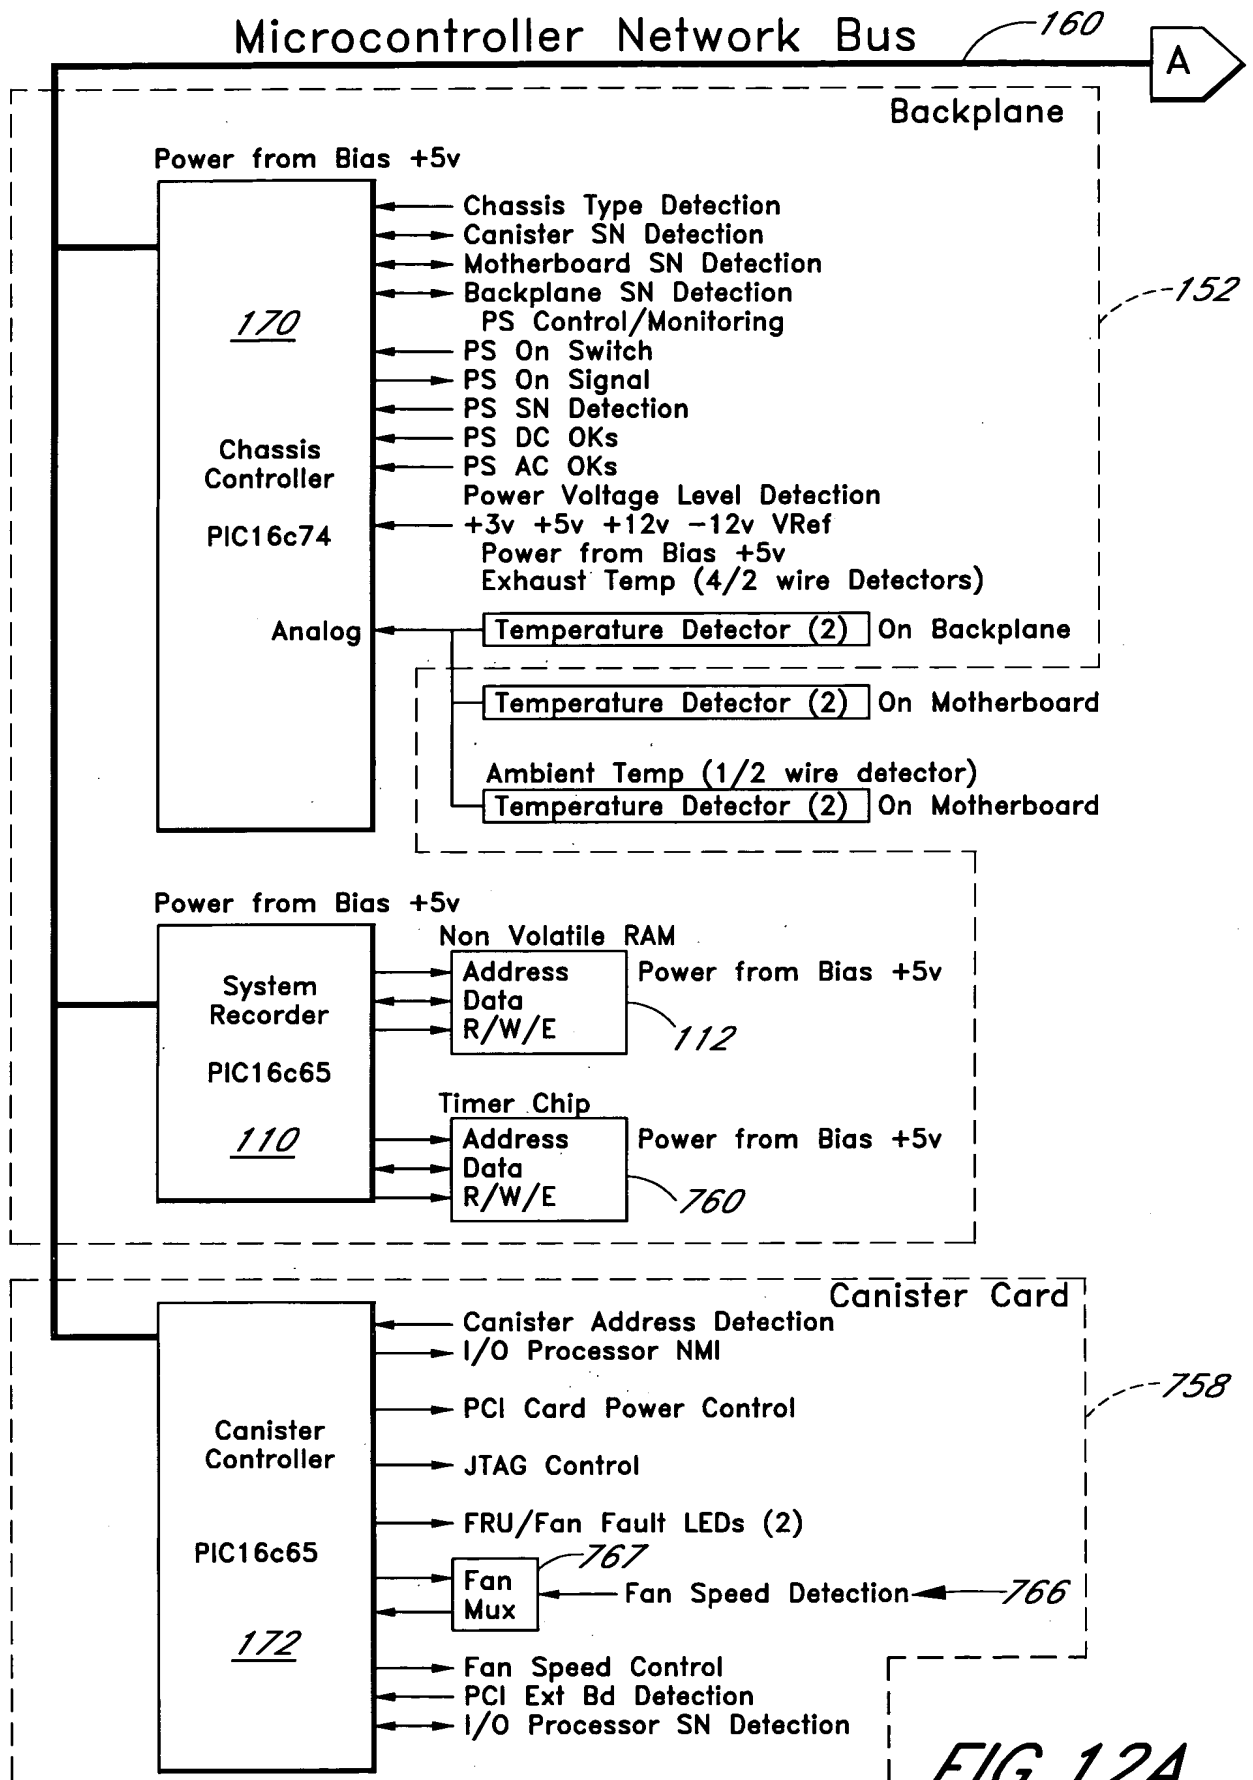
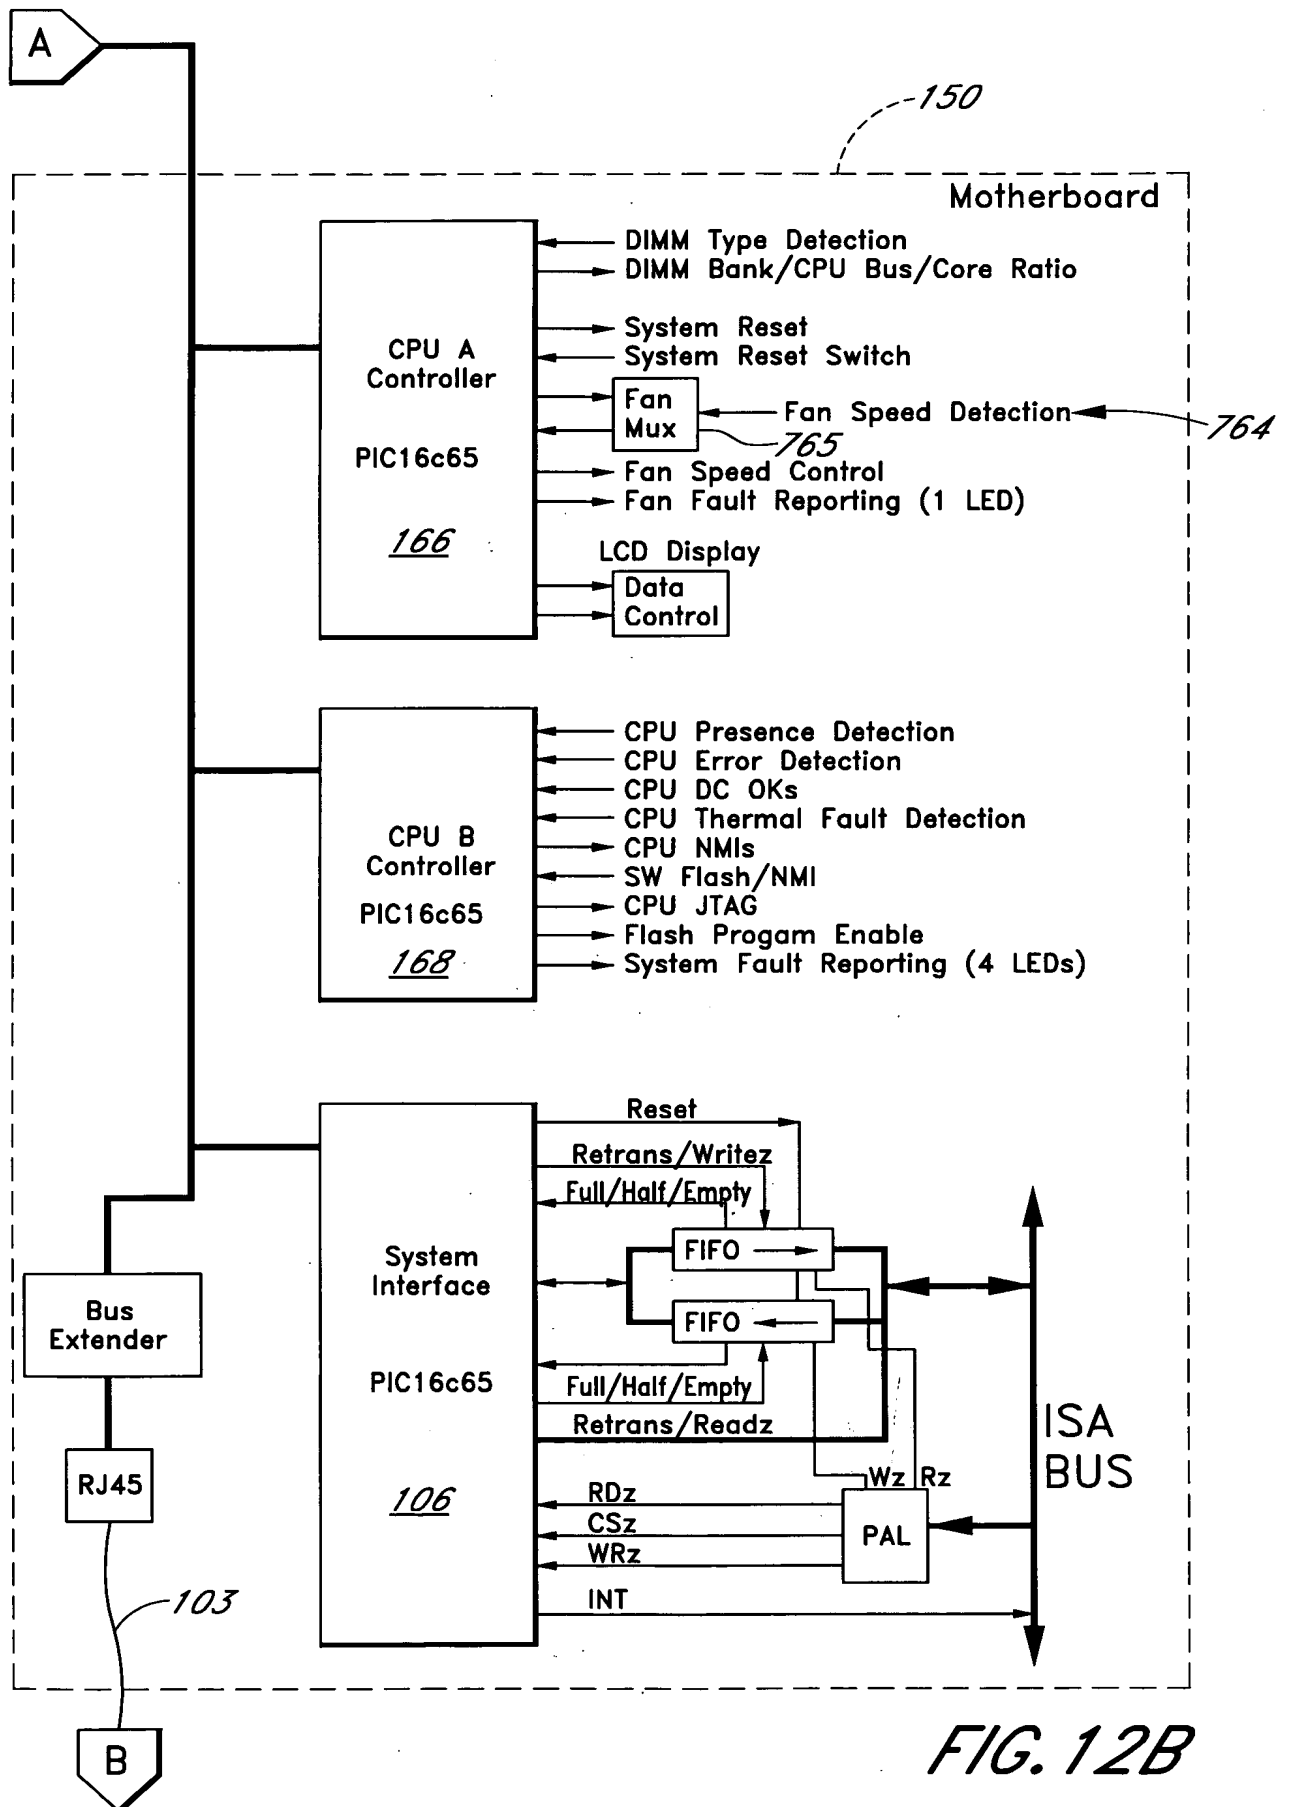


FIG. 12A



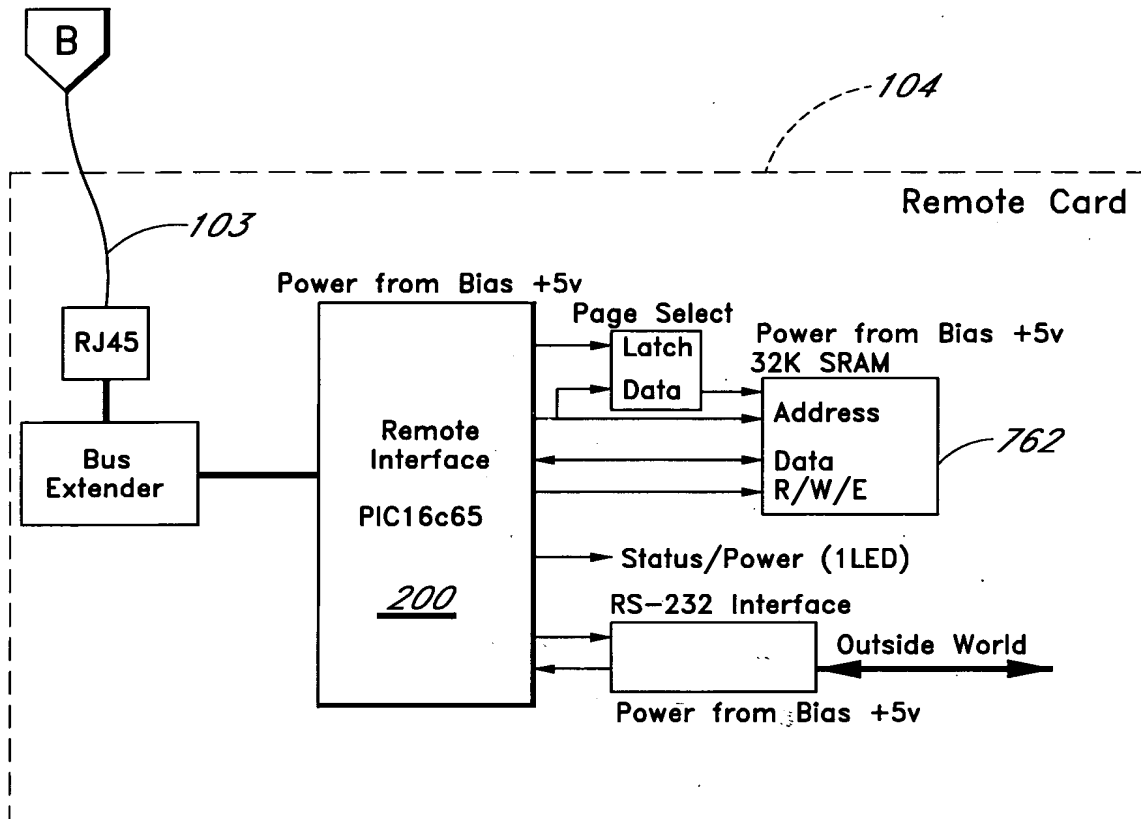
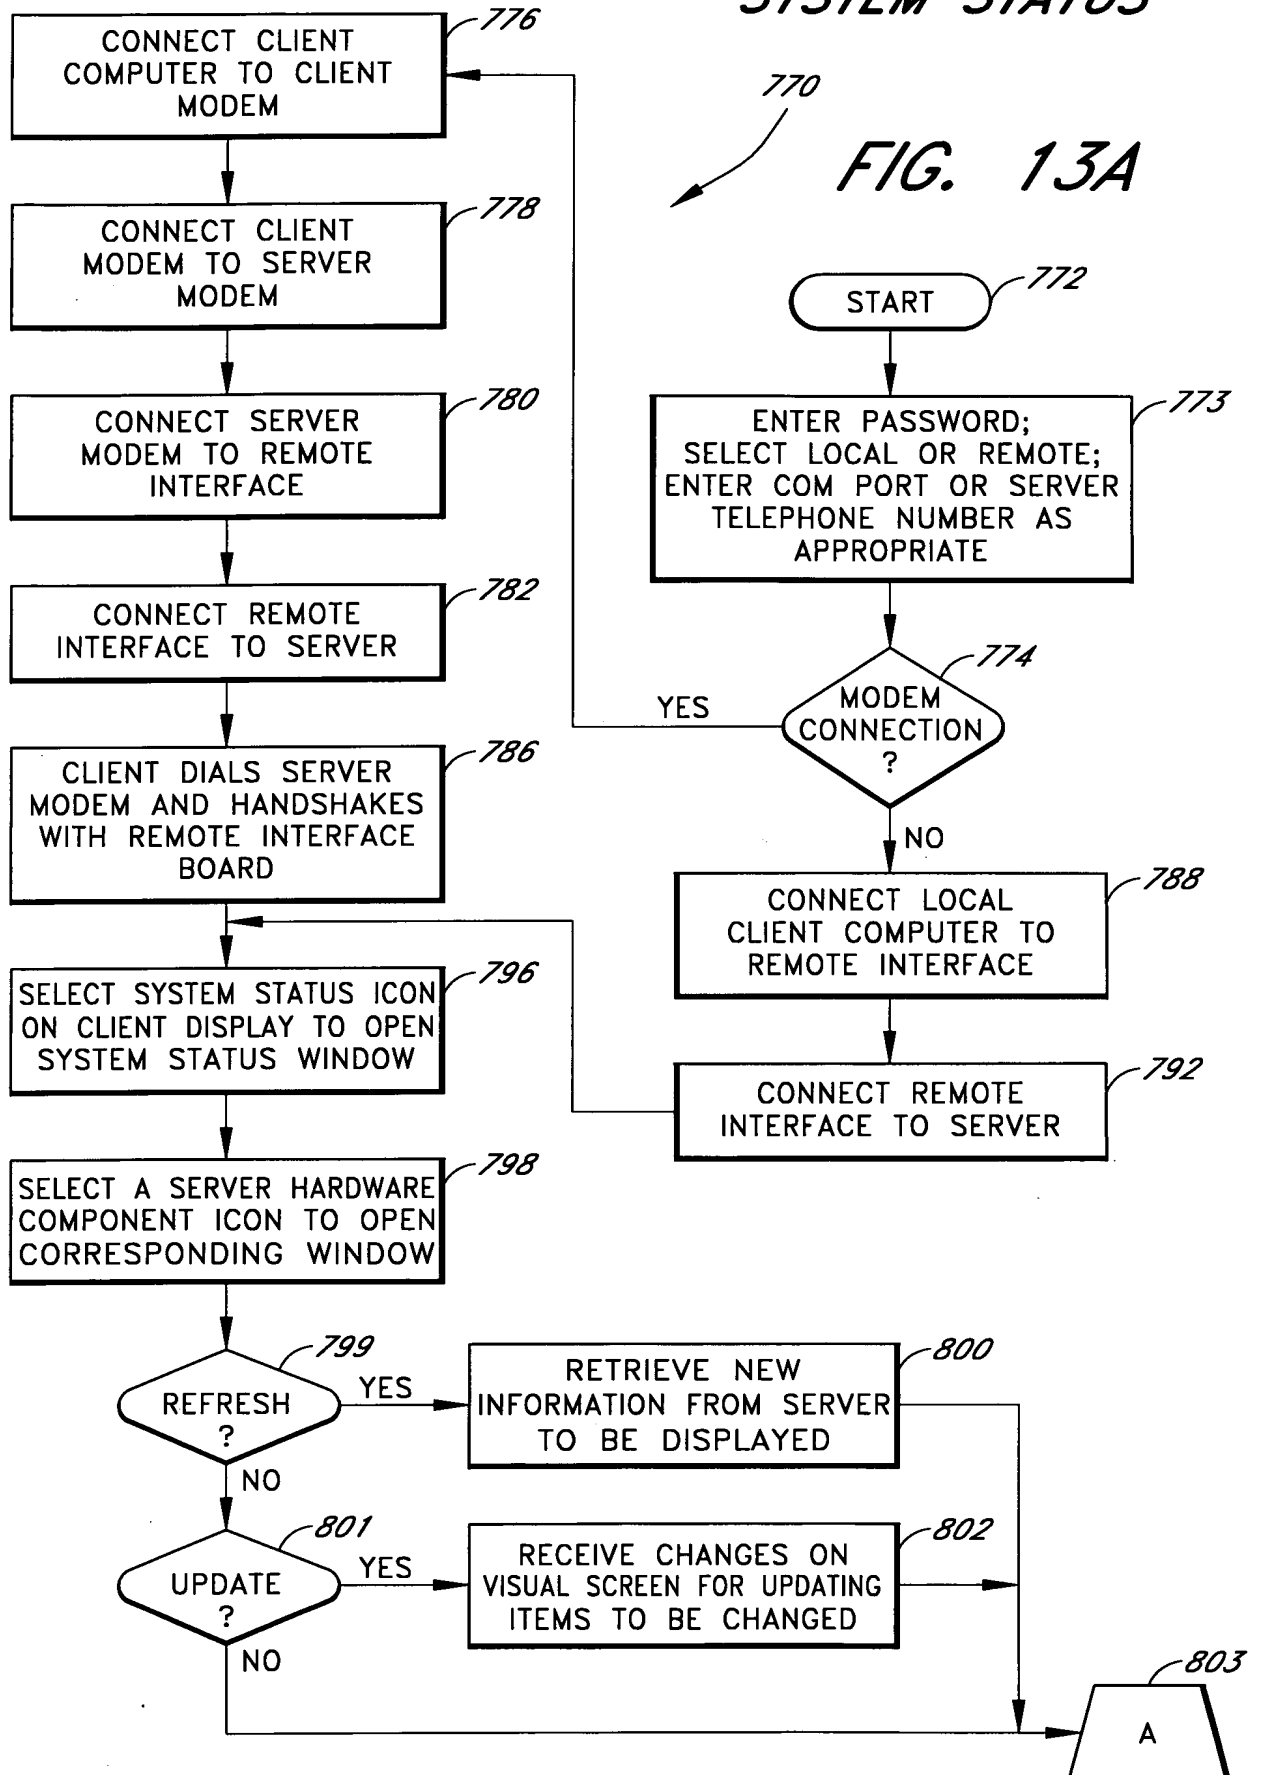


FIG. 12C

SYSTEM STATUS

FIG. 13A



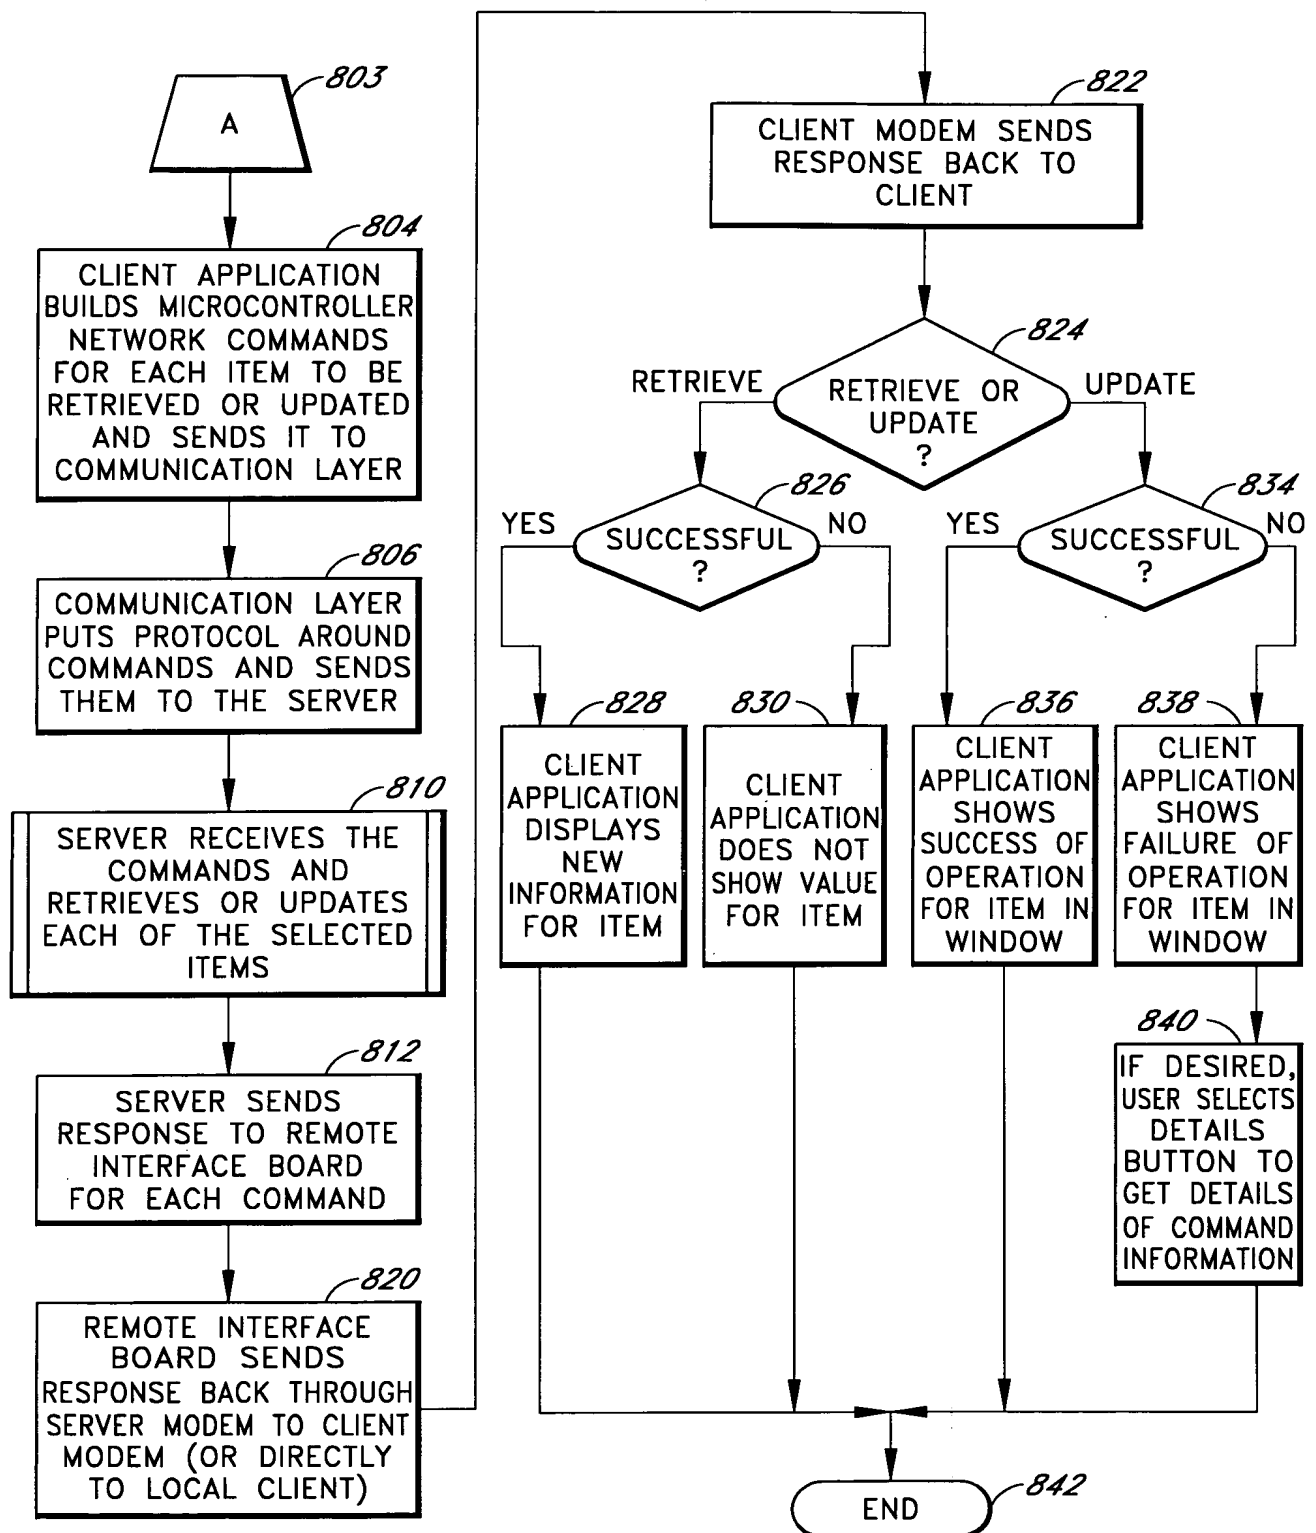


FIG. 13B

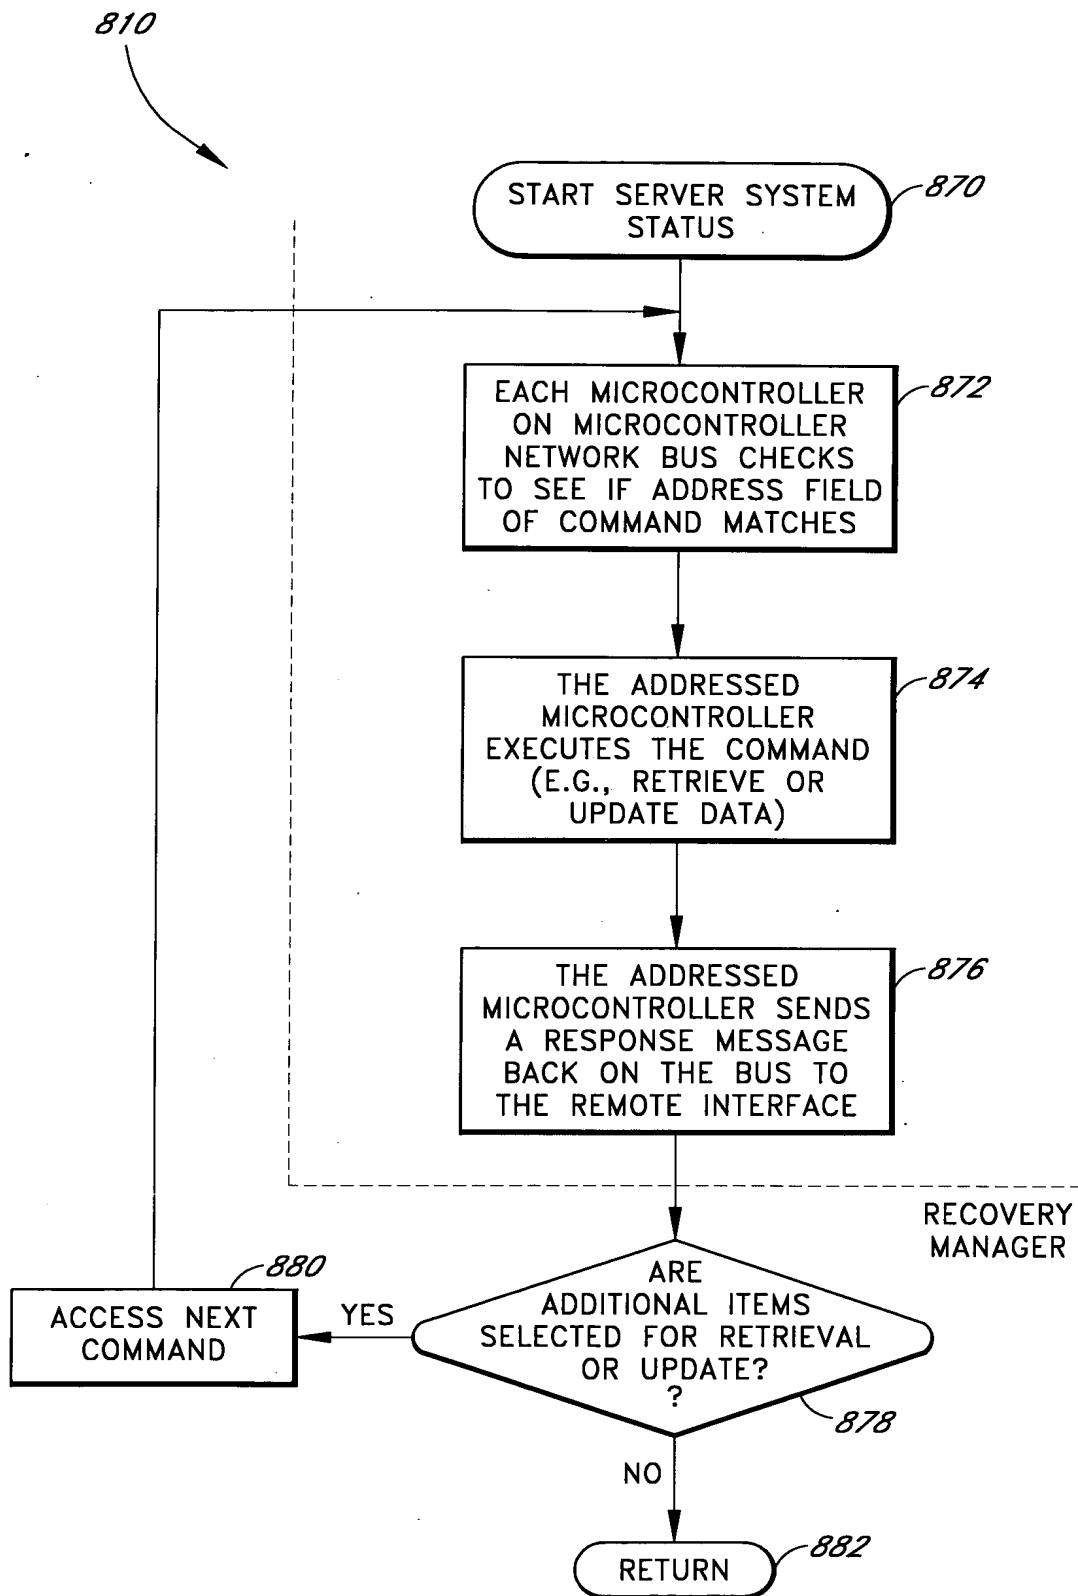


FIG. 14

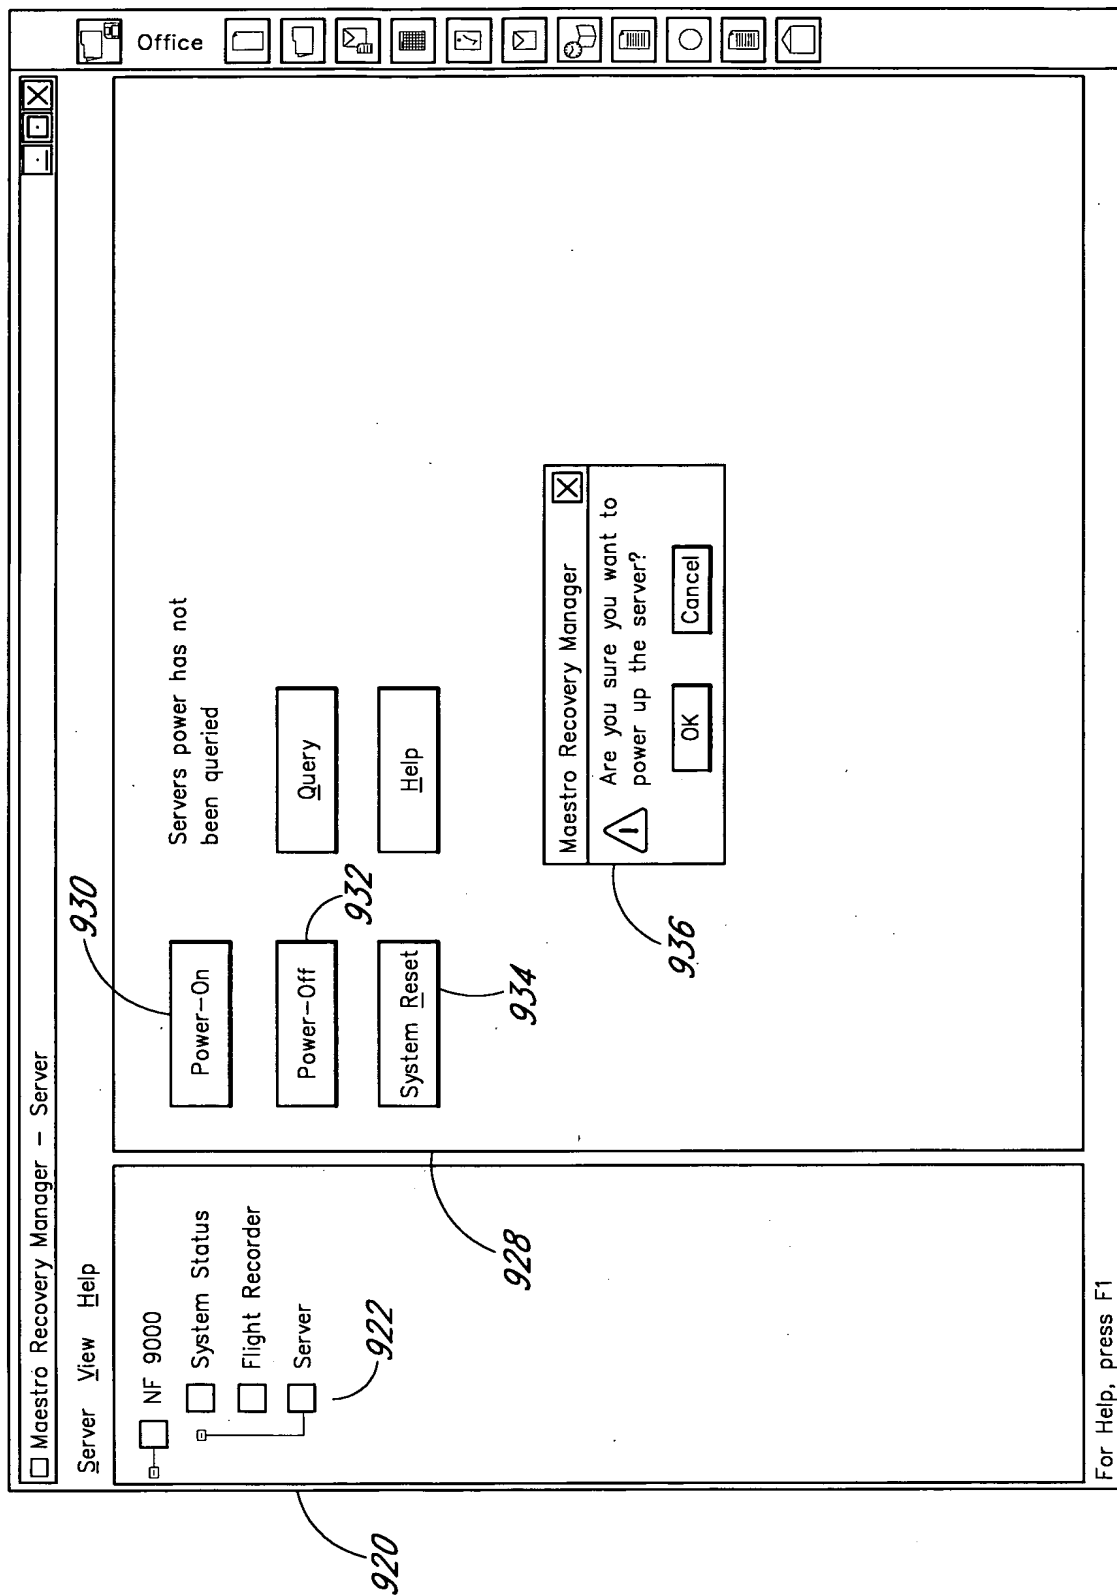


FIG. 15

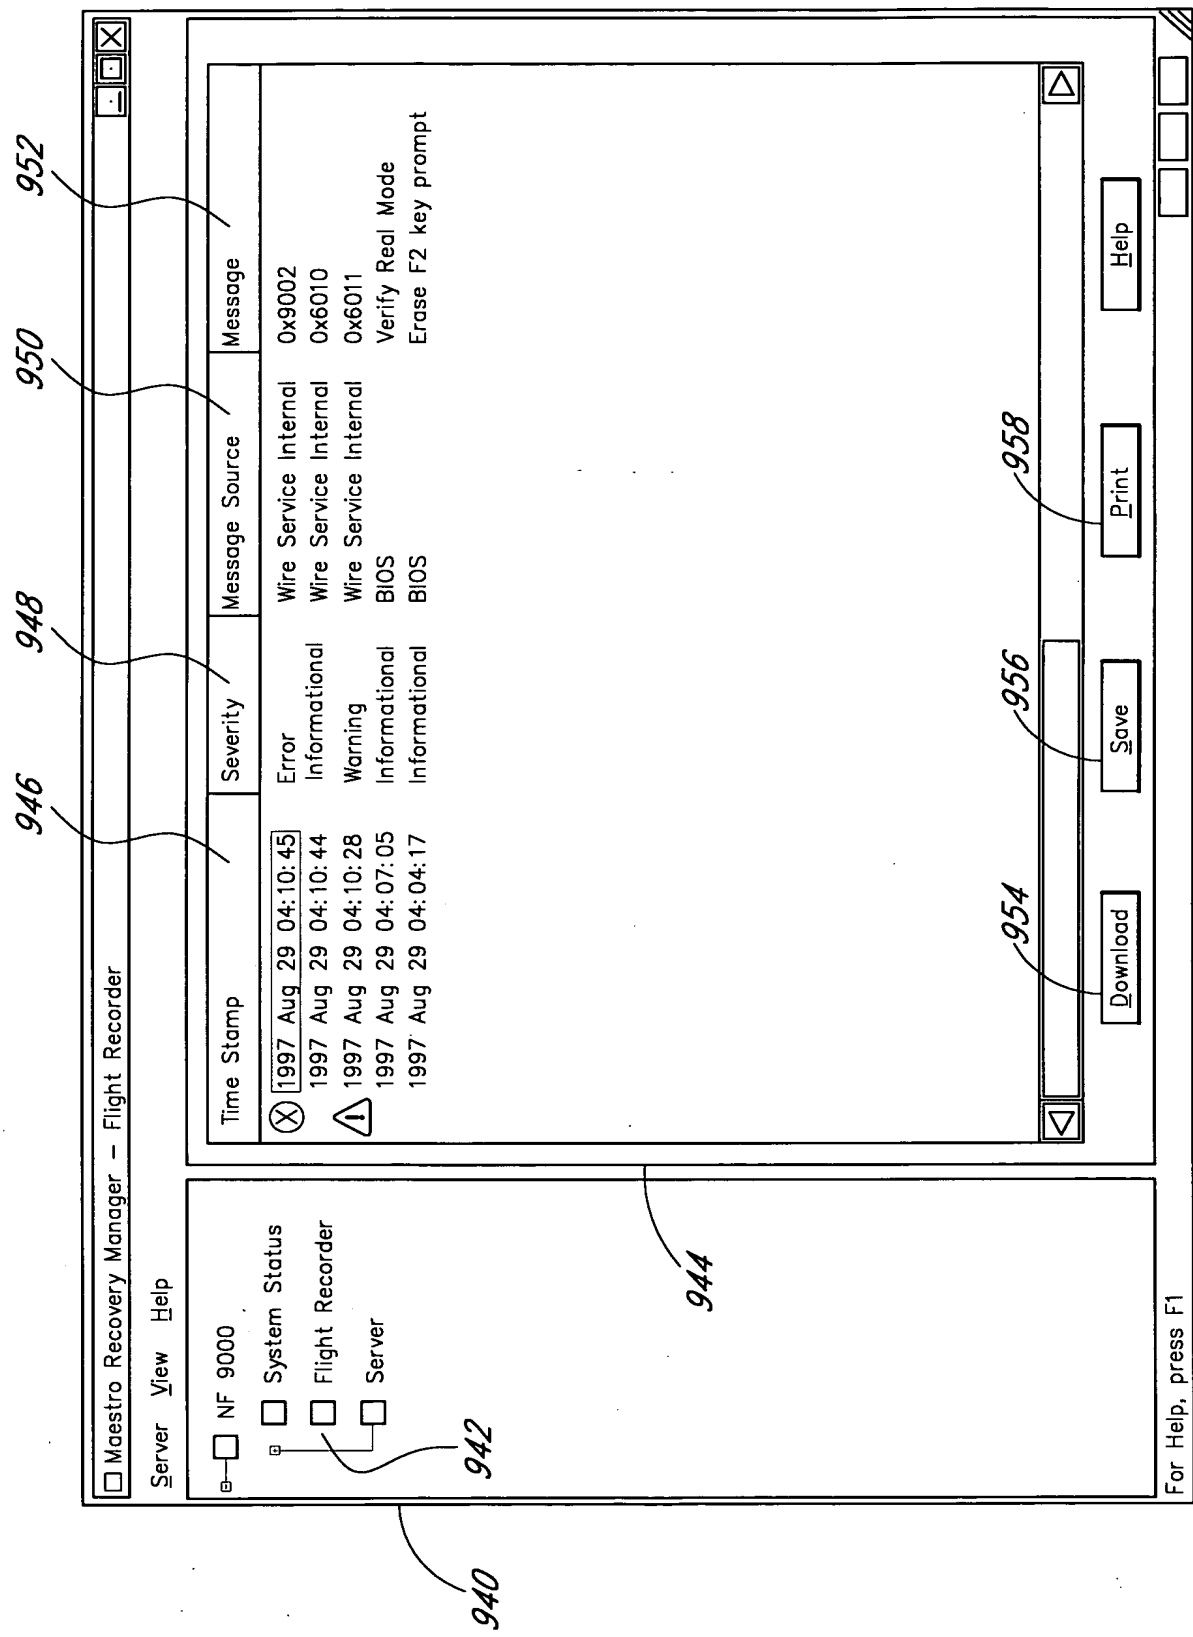


FIG. 16

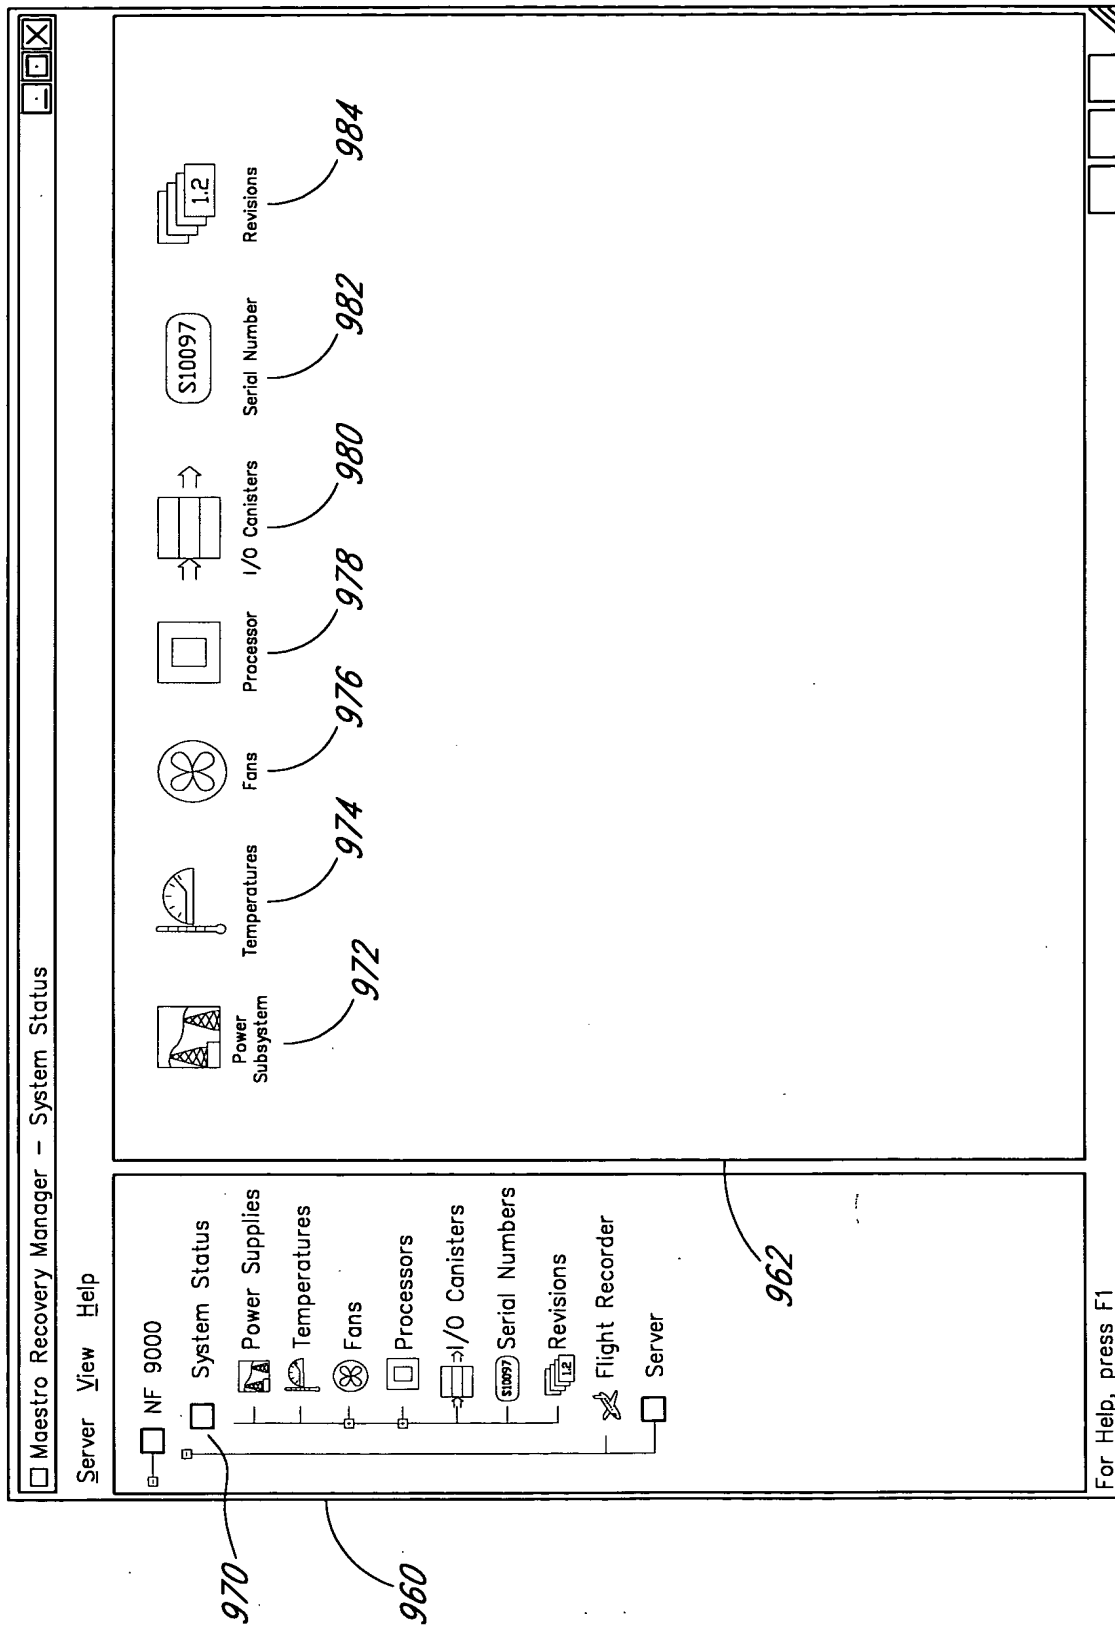


FIG. 17

985 986 987 988 989 990 991

☐ Maestro Recovery Manager - Fans

Server

View

Help

☐ NF 9000

System Status

☐ Power Supplies
 ☐ Temperatures
 ☒ Fans

System Board

Canister A

Canister B

Canister C

Canister D

Processors

I/O Canisters

Serial Numbers

Revisions

Flight Recorder

Server

976

1000

994

960

| Location | Fan | Speed | Speed Control | Fault Indicator LED | Fault | Low speed fault threshold speed |
|--------------|-----|-------|---------------|---------------------|-------|---------------------------------|
| System Board | 1 | 4740 | high | ON | YES | 4740 |
| | 2 | 5160 | | | YES | |
| | 3 | 4260 | | | YES | |
| | 4 | 8520 | | | YES | |
| | 5 | 9540 | | | no | |
| | 6 | 480 | | | no | |
| Canister A | 1 | 4740 | high | ON | no | 4740 |
| | 2 | 5160 | | | no | |
| Canister B | 1 | 4740 | high | ON | no | 4740 |
| | 2 | 5160 | | | no | |
| Canister C | 1 | 4740 | high | ON | no | 4740 |
| | 2 | 5160 | | | no | |
| Canister D | 1 | 4740 | high | ON | no | 4740 |
| | 2 | 5160 | | | no | |

For Help, press F1

992

FIG. 18

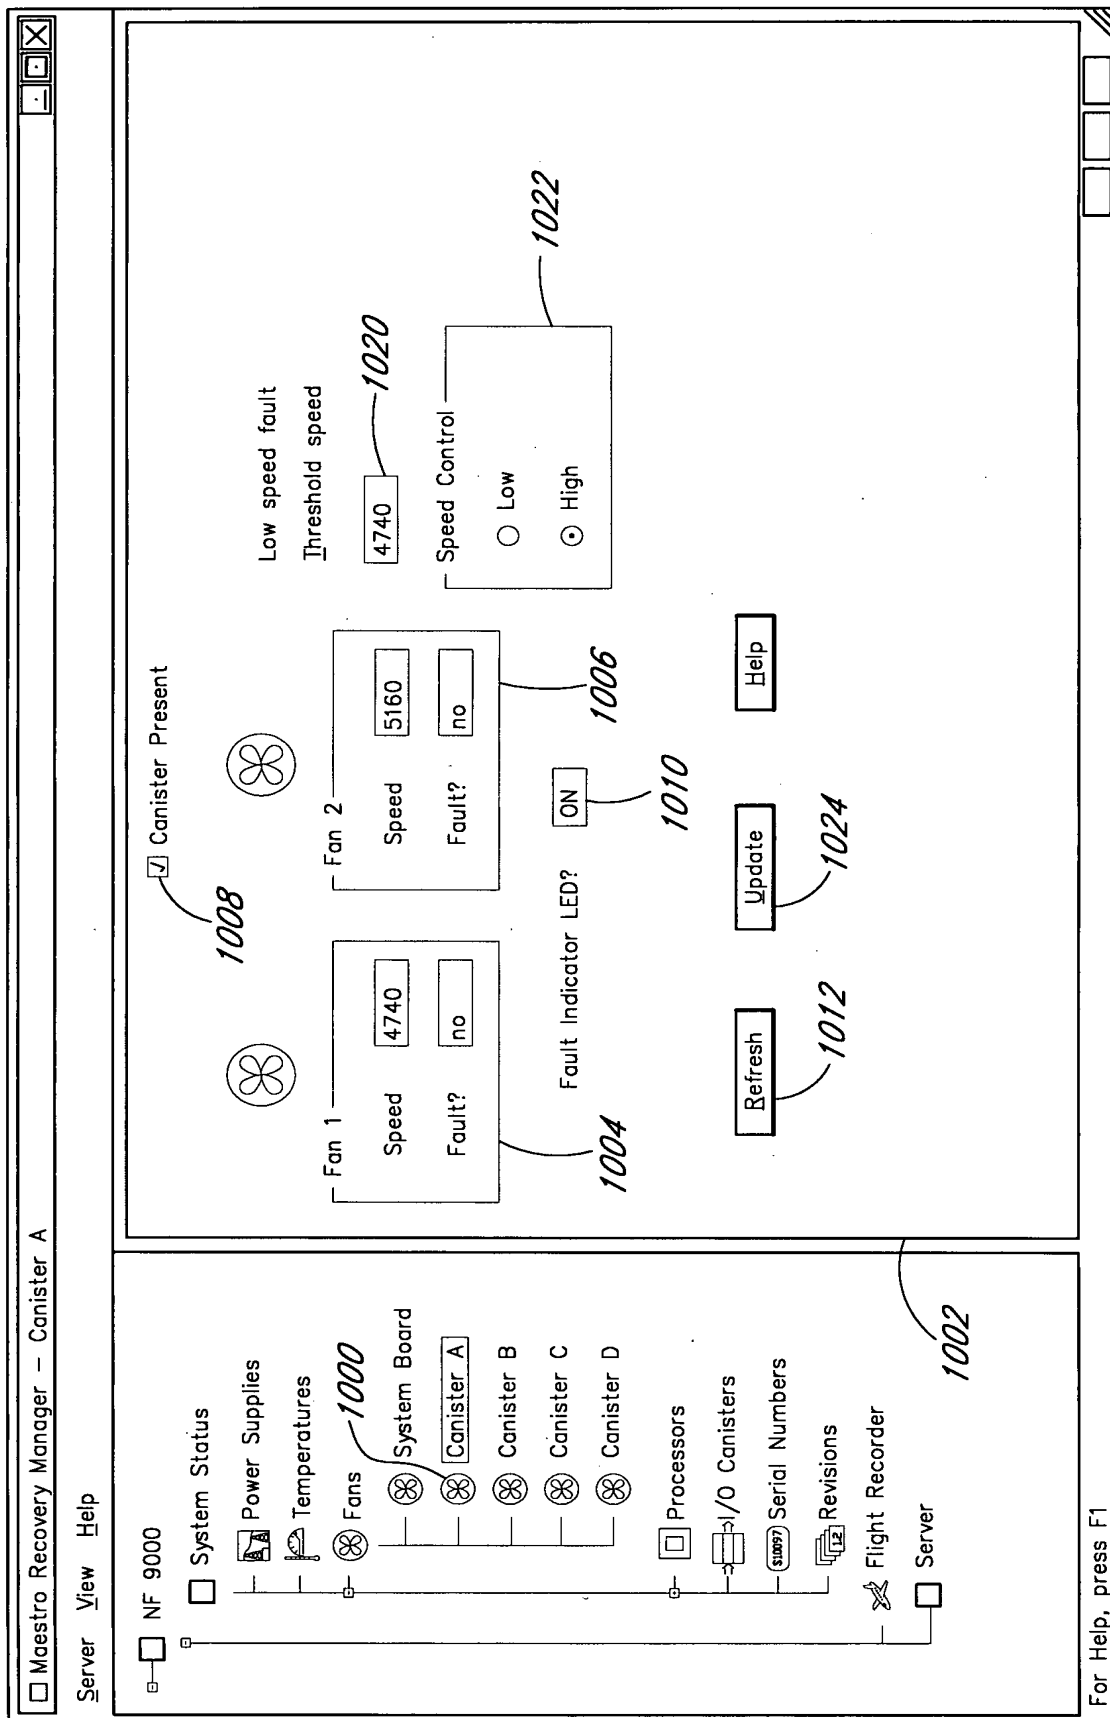


FIG. 19